

Welcome to the World of Solar Electric Power

Wireless solar electric power systems are now in use around the world, servicing many different remote electrical needs. Thousands of residences – from full-time off-grid homes and vacation cabins to remote villages – are powered by a solar electric system. You may not realize that wireless solar electric systems provide the power to enhance cellular phone signals from remote mountaintop sites across the globe. Millions of gallons of water are moved daily by solar electric systems. Recreational vehicles and pleasure boat owners, because of on-board solar electric systems, need not depend on utility hook-ups or unreliable generators for their safe passage. And, in most remote locations on the globe, solar electric systems are working silently and reliably everyday to protect pipelines from corrosion, monitor air quality, and accomplish many important jobs for industry.

This Design Guide is intended to give you an overview of wireless solar electric systems. It explains how systems work, what the important components are, and how to choose the proper system for your needs.

This publication is used in conjunction with our “Solar Electric Products Catalog” to provide you with all the information you need to make an informed decision. If you intend to purchase a solar electric system, this guide will provide you with the information to ask the right questions and understand the operation of your proposed system. Included are worksheets so that you can calculate the size of your own system.

It is understood that when purchasing a solar electric system, you should work with an industry professional; a company that is knowledgeable in sales and service. Our network of Authorized Dealers can help you make the right choices to solve your energy problems.

How does Photovoltaic work?

We can easily explain how the Photovoltaic effect produces a flow of electrons. In short, electrons are excited by particles of light and find the attached electrical circuit the easiest path to travel from one side of the cell to the other. Envision a piece of metal such as the side panel of a car. As it sits in the sun the metal warms. The exciting of electrons, bouncing back and forth creating friction and therefore heat causes this warming. The solar cell merely takes a percentage of these electrons and directs them to flow in a path. This flow of electrons is, by definition, electricity.

Is Photovoltaic cost effective?

Yes, PV is cost effective in the right location. By this we mean where the extension of utility lines are a major factor. We use the figure of one-third of a mile as a rule of thumb for cost effectiveness, yet rates vary substantially from site to site. This third-of-a-mile figure is only a rule of thumb. If you haven't already, get a quote from your local power company.

If you are on utility power at present – PV is not a cost effective move. Utility power is much cheaper than PV power. Why? Because we have not yet begun to pay for the externalities of fossil fuel and nuclear generating plants. When this country begins to pay for the sulfur emissions, which cause acid rain, global warming and nuclear waste disposal, to name a few, we will see power costs increase. With this in mind we need to ask and answer the question again. We believe, over the working life of a PV system, it can very well be a cost effective move. It all depends on the real price increases of utility power, 2, 5, 10 and more years from today.

Table of Contents

Introduction to Solar.....	3-6
Power Consumption Information....	7-10
Components of a System.....	11-22
Solar Modules.....	12-13
Trackers & Mounts.....	13
Wind Generators.....	14
Charge Controllers.....	15
Inverters.....	16-17
Battery Chargers.....	17
Batteries.....	18-21
Monitors.....	22
Water Pumping.....	23
Generators.....	25
RV Systems.....	26-27
Cabin Example System.....	28-29
Genverter Example System.....	30-31
Residential Example System.....	32-33
Powerline Example System.....	34-35
Appendix.....	36-41
Glossary.....	42

Powering Your Heating Loads

Photovoltaic systems and the power they produce are best suited and most economical for operating motors, pumps, electronic equipment, lighting and the like.

PV's are not recommended to run your heating loads. Appliances such as toasters and microwaves are not a problem because of the low running times. Yet electric ranges, water heaters or baseboard heaters simply require enormous amounts of power, and cannot be run by photovoltaic in an economically effective manner.

To power these loads we recommend thermal solar systems for space and water heating. In cloudy weather, wood and gas, either natural or propane, run these appliances efficiently and economically. In many systems we recommend propane for cooking, water heating and sometimes refrigeration.

The Whole Home Approach

When considering energy efficiency it is important to consider the home as a system. Most loads are related to each other. For example: a well insulated house requires not only/ less heating and cooling but also less energy to distribute and circulate this conditioned air. Correctly placed windows not only heat the home, but can also contribute a great deal of natural light, thus reducing both heating and lighting requirements. The home that is designed from the ground up with energy efficiency in mind will require much less of a photovoltaic power system.

Trying to utilize photovoltaic to power the conventional American home with its conventional appliances can be an unnecessarily expensive project. Reflection on these costs has prompted most of our customers to look first to conservation to reduce their loads. This is a cost effective move even for those still on utility power. For those going with PV, it can mean a much smaller and less expensive system.

Most of the houses that have been powered with PV do not appear noticeably different from conventional houses in terms of comfort and convenience. Some people do decide to adapt their life style when producing their own energy, and most of these changes have to do with simply being more conscious of shutting off loads not in use. The largest change of being your own utility is the responsibility that this entails. Almost without exception, however, PV homeowners cite the increased independence that this decision brings as a great source of satisfaction.

Solar vs. Wind vs. Hydro Power



Many solar electric homeowners build the home they have dreamed of beyond power lines where land prices are lower and electric bills are unheard of.

How do PV's compare to other alternative power sources?

Wind generating plants require a good steady wind at regular intervals over the four seasons. If you have a site where you have this resource, power production will not be a problem.

Hydroelectric generators are another option. These small generators require a healthy flow of water with good vertical drop throughout the year.

Two points to look at are the site-specific nature of these power sources and the difference in moving parts. Solar electricity many times has the advantage with both factors, sunlight being fairly universal and PV's having no moving parts to wear and eventually fail.

A combination of systems often works the best. Many times when the clouds reduce your solar output, wind or hydro systems are performing at full power.

Solar Water Heating

Different solar technologies are often confused. While the conversion of sunlight to electricity is photovoltaics, the collection of radiant energy to produce heat is **Solar Thermal**. We do not utilize photovoltaics to create heat as this is an unnecessarily complex, very indirect and inefficient way to do so. "Heating with electricity", as Amory Lovins has put it, "is like cutting butter with a chainsaw." The direct capture of solar radiation by heating a black collection surface, however, can be a very cost effective and efficient way to produce hot air or hot water.

We do not deal with solar thermal space heating. As sensible and efficient as this technology can be, it requires a good deal of on-site engineering and is the province of solar architects. Solar water heating for household uses can also be complex, but it can also be quite simple.

Electricity for Beginners

Electricity can be thought of as a flow of electrons through a conductor, generally wire. This flow is often compared to the flow of water through a pipe.

In this analogy, if you wish to have increased flow through the pipeline, you will need either a bigger pipe or you will have to push the water (or electricity) through at a more rapid rate. To push water through a pipeline at high speed requires high pressure. Pressure in water is measured in p.s.i., pounds per square inch. You can envision water under high pressure squirting out very rapidly from a nozzle, such as a fire hose, with enough speed and force (power) to carry it to great heights or to do the work of knocking someone off their feet if they get in the way. Similarly, the "pressure" of electron flow is called **voltage** and is measured in **volts**. Generally speaking, the higher the voltage of an electrical current, the more force behind it.

The amount of flow at a given pressure is determined by the size of the cross-section of the pipe. If you were to open a spigot twice as big as another with the water in both at the same pressure, twice the amount of water will flow from the larger. The amount of flow in electricity is called **amperage** or "current" and is measured in **amperes**, or "**amps**" for short.

Taking our analogy further, a battery stores electricity much as a water tower stores water. The taller this tower, the higher the pressure present at its base. If you open a valve at the base, water will flow out at a high pressure. In the same way, if you flip a switch connecting batteries to a load, electricity begins to flow. The higher the voltage of a battery bank, the greater the "pressure" of the electron flow. And just as with a tower of water, as electricity is drained from the battery, the pressure (voltage) slowly drops.

Most of the water available in such a tower is available from 45 to 60 p.s.i.. Once drained below 40 p.s.i., usage will rapidly deplete the supply at an ever decreasing pressure. In the same way, a **nominal** 12-volt battery has most of its stored electricity available from just below 12 volts to 12.6 volts. When drained below 12 volts, little amperage remains.

Just as a pump designed to fill such a tower would need to be able to produce at least 60 p.s.i. (that is, be able to lift 138 feet,) so does a solar PV module need to be able to produce at least 15 or 16 volts in order to charge a 12 volt battery.

Electrical **power** (the ability to do work) is a function of pressure (voltage) and amount (amperage). Double either one and you double the power the current is carrying through the circuit. The rule "**VOLTS MULTIPLIED BY AMPERES EQUALS WATTS**" defines this relationship. This is known as Ohm's Law. The **watt** is the measure of the power of electricity and will be our basic unit of measure for determining the size of our electrical loads.


A one watt load that is powered for one hour will consume one **watthour** of power. A 100 watt load powered for 2 hours will consume 200 watthours. And so on.

A 100 watt load could consist of a 12 volt appliance drawing 8.3 amperes or it might consist of a 120 volt appliance drawing .83 amperes. If the 120 volt, 100 watt unit is run for one hour it will consume .83 amperehours. And so on.

Another unit of measure that you will come across is the **kilowatt**. A kilowatt is 1000 watts. A kilowatthour could result from a 100 watt load being powered for 10 hours or a 1000 watt load being powered for 1 hour.

NOTE: the terms 110 volt, 117 volt and 120 volt, all refer to the same common household AC current.

Many water towers are physically shaped like a mushroom. Electrically speaking, batteries are mushroom shaped as well. A tower designed to produce 50 p.s.i. for household pressure might be built like this.

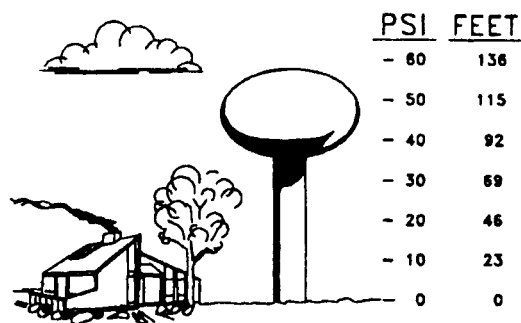

PSI	FEET
- 60	138
- 50	115
- 40	92
- 30	69
- 20	46
- 10	23
- 0	0

Planning and Sizing a Solar Electric System

In sizing a PV system the first two factors we work from are the sunlight levels or insolation values from your area and the daily power consumption of your electrical loads.

Insolation


Insolation or sunlight intensity is measured in **equivalent full sun hours**. One hour of maximum, or 100% sunshine, received by a module equals one equivalent full sun hour. Even though the sun may be above the horizon, for example, 14 hours a day, this site may only receive six hours of equivalent full sun. Why? For two main reasons. One is reflection due to a high angle of the sun in relationship to your array. The second is also due to the high angle and the amount of the earth's atmosphere the light is passing through. When the sun is straight overhead the light is passing through the least amount of atmosphere. Early or late in the day the sunlight is passing through much more of the atmosphere due to its position in the sky.

Our sun trackers can help reduce reflectance but cannot help with the increased atmosphere in the sun's path.

Because of these factors our most productive hours of sunlight are from 9:00 a.m. to 3:00 p.m. around solar noon. Before and after these times we are making power but at much lower levels.

When we size solar modules, we take these equivalent full sun hour figures per day and average them over a given period. See the charts below.

We like to work with two figures here: average annual equivalent full sun hours and average

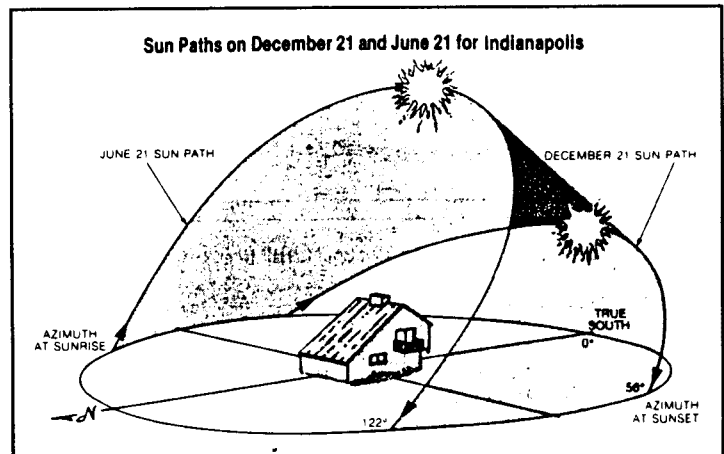

This diagram illustrates the path of the sun over varying seasons. Remember when selecting a site for your solar modules to pick a spot that is clear of shade from a minimum of 10 A.M. to 2 P.M. on December 21st. Even a limb from a deciduous tree will substantially reduce power output.

These are averages, contact us for your exact insolation data.


Many solar sites are quite uncomplicated in terms of shading and aspect. You may already have a good idea of where the sun appears in the morning and disappears in the evening, as well as how low it swings in the winter sky. If your site is partially shaded, it may be necessary to determine exactly where the best placement of modules will be. We do have site analysis tools. If you need a more sophisticated site analysis, please contact us. We also have world-wide insolation data.


winter equivalent full sun hours. In most locations in the United States winter yields the least sunlight because of shorter days and increased cloud cover, as well as the sun's lower position in the sky.

The Basic Idea Is Simple


Photovoltaic modules (solar panels) convert sunlight into electricity. Wire conducts the electricity to batteries where it is stored until needed. On the way to the batteries, the electrical current passes through a controller (regulator) which will shut off the flow when the batteries become full.

For some appliances, electricity can be used directly from the batteries. This is "direct current" and it powers "DC" appliances such as car headlights, flashlights, portable radios, etc. To run most appliances found in the home, however, we need to use "alternating current" or "AC", the type which is found in wall sockets. This we can produce utilizing an inverter which transforms DC electricity from the batteries into AC. The inverter's AC output powers the circuit breaker box and the common outlets in your home.

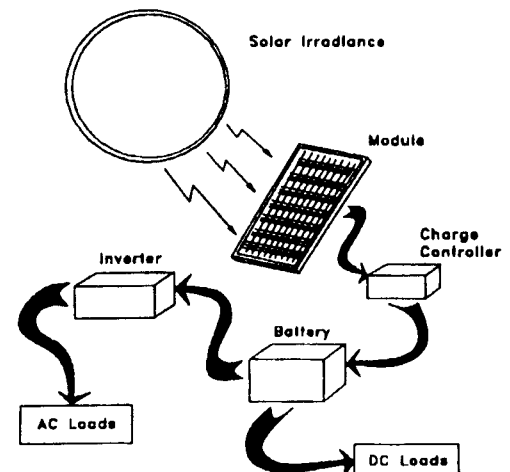

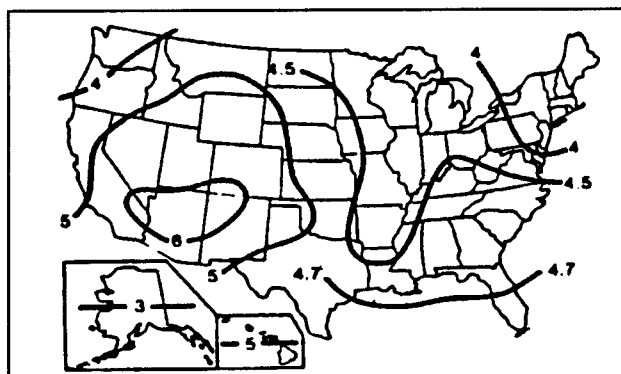

Yearly average equivalent sun hours per day.

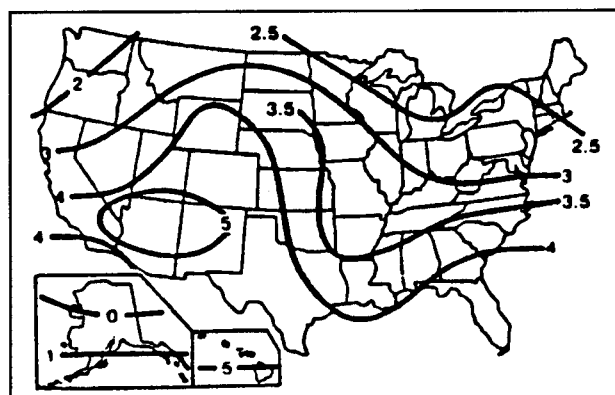

Equivalent full sun hours per day for a four-week period from December 7th to January 4th.

Calculating Power Consumption

After determining the amount of solar radiation available, we must next determine the size of the load that we are supplying with power. The unit of measure for sizing is either watthours or amphours. We normally use watthours because it applies to both AC and DC circuits.

The procedure is the same for all systems, regardless of whether the load is a telecommunications repeater or a house. What we need to end up with is a figure of the average daily watthours consumed. This will allow us to determine how many modules will be needed to produce the power and how many batteries will be needed to store the power.

The table on this page is an analysis of energy usage for a representative small home. We have itemized each appliance and its individual run time per day and per week. We then summed the watt hours of all the individual units for a total daily watt hour figure. Making up a chart such as this will allow you to understand where your power is going and may give you ideas for how to reduce your loads in the most effective manner.

Incorrectly assessing loads can end up being frustrating and expensive. Underestimating your loads can lead to major system inadequacies. Overestimating will lead to excess capacity. While many of our hybrid systems have a range of flexibility in providing power, some systems do not. But both problems can be avoided by careful assessment of loads.

YOU HAVE BEEN PROMOTED

You are no longer just a consumer. You now manage your own power plant and enjoy the benefits and responsibilities entailed. It is critical that you know where your power is going. It is important that you compile the best information you can for the design process. It is important that you understand the basic elements of how your system functions.

We are here as an information resource and as a backup should you need to troubleshoot a problem. You do not need to know all the electronic components that make up the internal workings of each controller or inverter. It is important that you are comfortable and knowledgeable with the day to day operation and maintenance requirements of your equipment, and that you rely upon yourself to ask us questions if there is something you do not understand.

$$\text{Volts} \times \text{Amperes} = \text{Watts}$$

$$\text{Watts} \times \text{Hours of Use} = \text{Watt hours}$$

We cannot overemphasize the importance of putting together the most accurate information you can. Without it we are only guessing.

A load evaluation form is included in the appendix for your use.

Power Consumption Tables

These figures are approximate representations. The actual power consumption of your appliances may vary substantially from these figures. Check the power tags, or better yet, measure the ampere draw with an amp meter.

Multiply the hours used on the average day by the watts per hour listed below. This will give you the watt hours consumed per day, which you can then plug into the load calculation. We have approximated some of the duty cycle times (hours used each day) for a theoretical average household. Actual use varies a great deal from house to house, and even seasonally within the same home.

Remember that some items, such as garage door openers, are used only for a fraction of an hour or minute per day. A 300 watt item used for 5 minutes per day will only consume 25 watt hours per day.

Where a range of numbers are given, the lower figure often denotes a technologically newer and more efficient model. The letters "NA" denote appliances which would normally be powered by non-electric sources in a PV powered home.

Appliance	Watts/Hour	Appliance	Watts/Hour	Appliance	Watts/Hour
Coffee pot	200	Garage door opener	350	Compact fluorescent	
Coffee maker	800	Ceiling fan	10-50	incandescent equivalents	
Toaster	800-1500	Table fan	10-25	40 watt equiv.	11
Popcorn popper	250	Electric Blanket	200	60 watt equiv.	16
Blender	300	Blow dryer	1000	75 watt equiv.	20
Microwave	600-1500	Shaver	15	100 watt equiv.	30
Waffle iron	1200	Waterpik	100		
Hot plate	1200			Electric mower NA	1500
Frying pan	1200	Computer		Hedge trimmer	450
		laptop	20-50	Weed eater	500
Dishwasher	1200-1500	pc	80-150	1/4" drill	250
Sink waste disposal	450	printer	100	1/2" drill	750
		Typewriter	80-200	1" drill	1000
Washing machine		TV 25" color	150	9" disc sander	1200
automatic	500	19" color	70	3" belt sander	1000
Manual	300	12" b&w	20	12" chain saw	1100
Vacuum cleaner		VCR	40	14" band saw	1100
upright	200-700	CD player	35	7 1/4" circ. saw	900
hand	100	Stereo	10-30	8 1/4" circ. saw	1400
Sewing machine	100	Clock radio	1		
Iron	1000	AM/FM car tape	8	Refrig/freezer - Conventional	
		Satellite dish	30	20cf (15 hours)	540
Clothes dryer		CB radio	5	16cf (13)	475
electric NA	4000	Electric clock	3	Sunfrost	
gas heated	300-400			16cf DC (7)	112
		Radiotelephone		12cf DC (7)	70
Heater		receive	5	Vestfrost refrigerator/freezer	
engine block NA	150-1000	transmit	40-150	10.5cf	60
portable NA	1500			Freezer - Conventional	
waterbed NA	400	Lights:		14cf ff (15)	440
stock tank NA	100	100w incandescent	100	14cf (14)	350
Furnace blower	300-1000	25w compact fluor.	28	Sunfrost freezer	
Air conditioner NA		50w DC incandescent	50	19cf (10)	112
room	1000	40w DC halogen	40	Vestfrost refrigerator/freezer	
central	2000-5000	20w DC compact fluor.	22	7.5cf(8)	50

We strongly suggest that you invest in a multimeter if you are considering making your own power. Also helpful are clamp-on type amp-meters. It actually makes sense to know where your power is being used, even if you are not producing it, and if you are, these meters are essential diagnostic tools.

Does it really cost more to purchase a generator that requires no refueling for 20 to 30 years or more, needs no maintenance and is as environmentally benign as a window in your home?


Our customers have invested in PV for a diversity of reasons: economics of producing power in remote locations, security of home power supplies, taking a personal stand on environmentally threatening issues, or just to get away from the noise and inefficiency of a motor generator.

Your Electrical Inspector and PV

We have found that some electrical inspectors are not familiar with photovoltaics and the section of the National Electrical Code which deals with it. For this reason we find it generally best for the system owner to communicate with your inspector early on in the process. You can install the system first and ask questions second, but the possibility of inconvenient and costly changes is very real. While we recommend following national code where applicable, local codes may vary; your inspector can tell you how they differ. Please remember that it is the inspector's job to keep your wiring safe, now and for the future.

AC or DC

The AC versus DC debate goes back to at least the time of Mr. Edison and Mr. Westinghouse. High voltage AC has the advantage of being efficiently conducted over very long distances with relatively low transmission losses. AC has thus become the standard for industry and domestic usage.

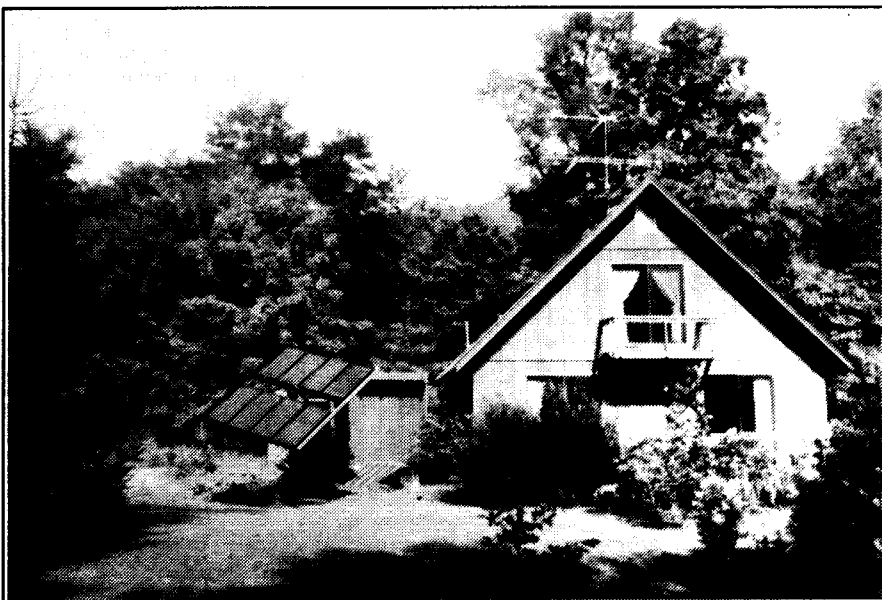

DC is generally used in low voltages, where transmission efficiencies are low. In some cases however, DC does have the advantage of efficiency in operation; as much as twice that of AC for some applications. A disadvantage of DC is that many appliances and equipment in 12 Volt DC versions are hard to find and are expensive.

Both have their advantages. With water pumping systems, we generally use all DC. In home systems we typically run all or the majority of loads with AC power. For maximum efficiency certain specific loads can easily be powered by DC circuits. Cabins or RV's use mostly DC and can use regular gauge wire because of small loads and short transmission distances.

How much room will the system require?

For a home system, a heated room in the utility area or near the circuit breaker box is normally utilized.

The batteries are contained in an enclosure vented to the outside perhaps the size of a washing machine or, in a larger home, the size of a chest freezer. Controllers, meters and inverters are generally mounted on the wall in a space a couple feet square and may project out one foot.

Outside, the space required is dependent on the number of modules. A space the size of two or three 4X8 sheets of plywood will accommodate a medium household system.


Another option is to utilize a separate power house. This offers a safe, convenient space for electrical components, the generator and possibly the mounting of the solar array.



This powerhouse is a locally made mini-barn, now fully insulated. The solar electric fence protects arrays, gen-shed, water storage tank and well area from livestock damage.

The Importance of High Efficiency

Using the best available technologies can save you money by saving energy. Such appliances often provide better service than outdated and inefficient technologies. These newer designs often cost more initially than their cruder counterparts but can have impressively short payback times. The importance of high efficiency appliances becomes doubly important for someone providing their own electricity. For example: a high efficiency refrigerator might be run with three 80 watt PV modules where as a conventional refrigerator might necessitate an additional 9 modules and additional battery capacity. This extra generating and storage capacity will cost many times the investment of the more efficient unit. An additional benefit is that more efficiency means less run time and less wear and tear on components. In the case of the refrigerator this can mean a life span twice that of the conventional unit.

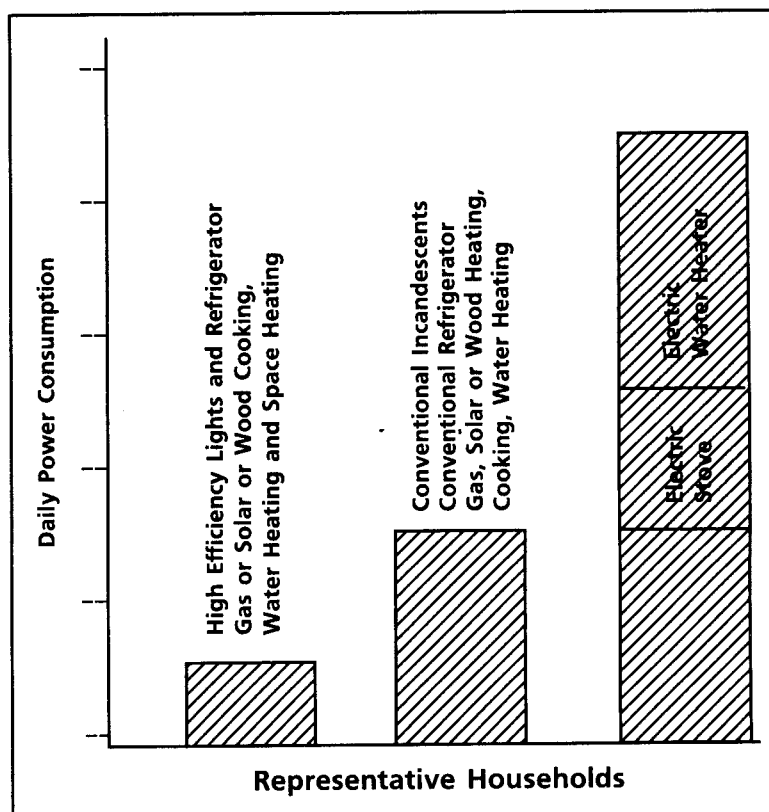

Ghost Loads

Small loads that are not easily discernible but can consume considerable amounts of power each day are termed "ghost loads". Examples include "instant on" circuitry in a television, wall cube transformers for answering machines, and electronic typewriters. These types of loads can sneak far more than their fair share of power. If not anticipated, located and dealt with, ghost loads can waste a substantial quantity of power.

"Power cubes" or "wall cubes" that plug into outlets to convert AC to DC for electronic equipment contain small transformers which can waste incredible amounts of power. A unit for a boom box, for instance, might consume 17 watts of power 24 hours a day, even though the actual device uses only 7 watts.

These kinds of loads are difficult to detect with an AC amp meter. The best way to find them is to shut every load in the home "off", and then shut down all circuits at the breaker box. Using a DC amp meter on the main battery cable, monitor each circuit as they are turned on one by one. If there is a ghost, it will appear.

There are two ways to deal with these troublesome loads.

The first, easiest, and most costly method is to accept them. Accept the fact that your inverter will never go into standby mode, add on to your array to compensate for this power consumption.



The second method minimizes power consumption. Place switches on the appliances that run unnecessarily, turning them truly off and on when required. For small, but necessary, loads – consider operating these at 12 or 24 volts DC. If this is not possible, a second, smaller, inverter can be installed to run select loads more efficiently. By doing this, the inverter can return to a no-load or idle mode, where it uses very little power.

Common Appliances with Ghost Loads

- TV's and VCR's
- Electric clocks
- Clocks built in to appliances (microwaves, ranges, telephones)
- Ni-Cad Battery chargers
- Ground Fault Interrupting Receptacles and breakers (GFCI)
- Cordless telephones
- Answering machines
- Low voltage appliances that can also utilize AC power

System Components

Systems vary greatly due to variation in size and run times of differing loads. They can use as little as a single 5 watt module or hundreds of large modules. There really is no such thing as an "average" system, even within a single kind of use. However, the basic PV system can be divided into several major components. The following section lists these components and their functions.

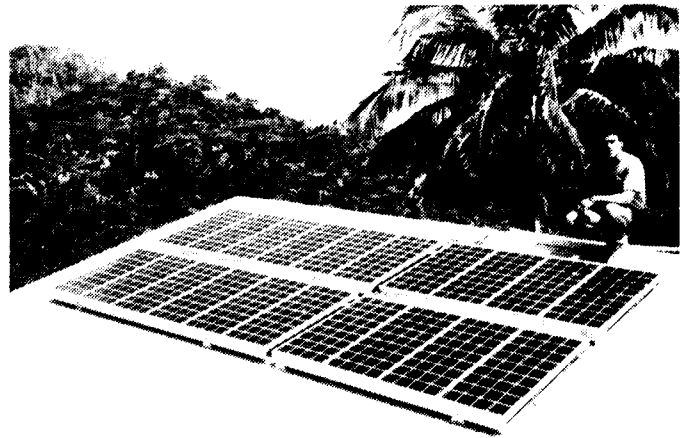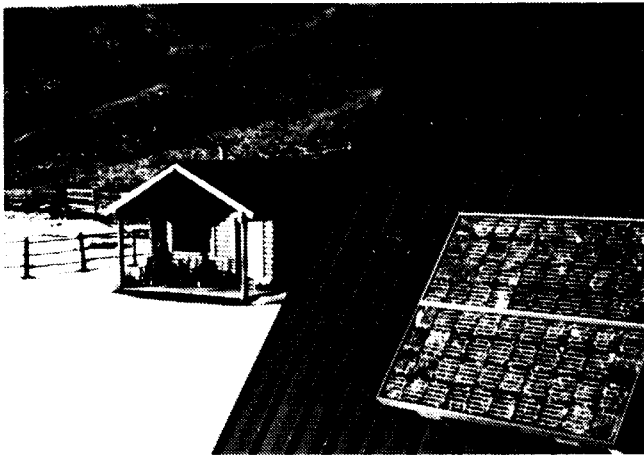

Components of a Solar Electric System

Component	Function
Modules	Generates electricity from sunlight
Controller	Regulates power to and from batteries
Fusing/Breakers and Disconnects	Overcurrent protection
Combiner Box	Enclosure for paralleling module output
Batteries	Stores electricity
Monitors and meters	Reports system status and power flows both instantaneously and cumulatively.

Component	Function
Inverter	Changes low voltage DC power to high voltage AC power
Generator	Provides backup AC power
Battery charger	Converts AC (generator power) to DC
Fixed Mount or Tracking Mount	Supports and aims modules toward sun
Powercenter	Combines: controllers, overcurrent protection and monitors in one enclosure

System Voltage Selection 12, 24 or 48 volts?

The nominal voltage of your system is usually determined by the system size. Small to medium systems, where most loads are DC, or a few loads are AC through an inverter, lend themselves to 12 volts nicely. Many lights and small appliances can be found at this voltage and efficiencies are high.

On the down side, 12 volt suffers from high line loss problems. The solar modules and loads cannot be far from the battery bank. (Review the wire loss tables in the Appendix.)

24 volt systems are suggested for medium to large systems. With 24 volts we have less wire loss problems and larger inverters are available. 24 volt DC appliances are more rare than 12 volt units. For this reason we lean heavily toward AC loads from these larger inverters. This simplifies wiring of the home to conventional AC wiring which exists in most homes and which any electrician can wire economically.

With the increased efficiency of AC lighting and the unlimited variety of low cost AC appliances, 24 volt systems, as well as 48 for large systems, have many advantages.



Solar Modules

Power Characteristics

The current and power output of photovoltaic modules are approximately proportional to sunlight intensity. At a given intensity, a module's output current and operating voltage are determined by the characteristics of the load. If that load is a battery, the battery's internal resistance will dictate the module's operating voltage.

A module which is rated at 17 volts will put out less than its rated power when used in a battery system. This is because the working voltage will be between 12 and 15 volts. As wattage (power) is the product of volts times amps, the module output will be reduced.


For example: a 50 watt module working at 13.0 volts will produce 39.0 watts (13.0 volts x 3.0 amps = 39.0 watts).

This is important to remember when sizing a PV system.

An I-V curve as illustrated to the right is simply all of a module's possible operating points (voltage/current combinations) at a given cell temperature and light intensity. Increases in cell temperature increase current but decrease voltage.

Maximum power is derived at the knee of the curve. Check the amperage generated at your batteries operating voltages to better illustrate the actual power developed at your voltages and temperatures.

Typical 12 Volt Module I-V Characteristics for Full Sun at 1000 Watts/m²

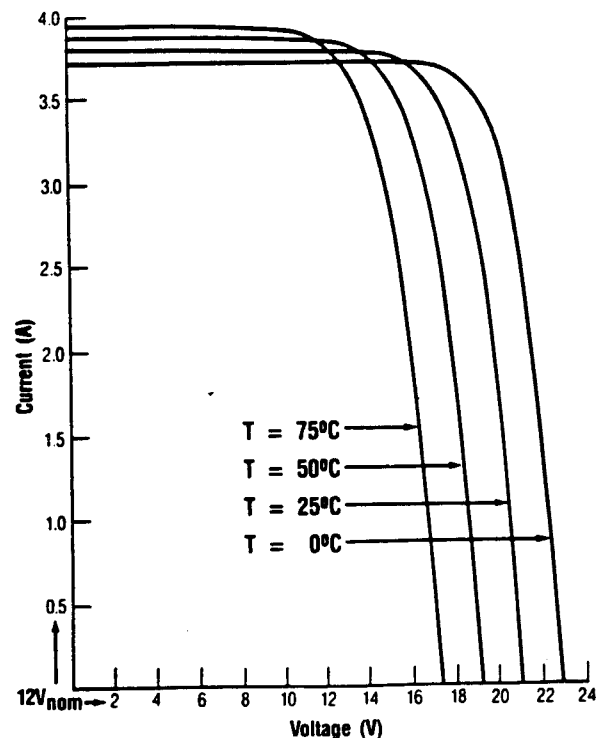

Shading

PV modules are very sensitive to shading. Unlike a solar thermal panel which can tolerate some shading, many brands of PV modules cannot even be shaded by the branch of a leafless tree.

Once a solar cell or a portion of a cell is shaded it becomes a load and draws power instead of producing it. Watch the amp meter of your system when a hand is passed over a module and you will see a substantial drop in output.

Some solar modules offer protection from partial shading. The advanced design of these modules include a diode between every cell, reducing partial shading problems.

Ask your solar professionals for more information if shade protection is needed.

Another rule of thumb - make sure no shading occurs between 9:00 a.m. and 3:00 p.m. around solar noon. Shading early or late is not much of a problem because these are low power producing hours anyway.

Reverse current protection

PV modules will leak power back from your batteries during no sun periods if not protected. This leakage is very small but over long, no-sun periods, this loss can accumulate. To prevent this we install a diode or protecting circuitry in the controller.

All controllers that we sell have reverse leakage protection. The circuit opens over periods of no sun, allowing the charging circuit to stop any reverse flow. A diode can also be used. This unit acts as a one way check valve—letting power flow in one direction to the batteries but not back to the PV module.

Mixing Sizes and Brands of Modules

In most cases mixing dissimilar modules in the same array is not a problem. When paralleling units of different amperage ratings, the output of the array will simply be the sum of the combined amperages. When paralleling units of different voltages, the lower voltage units will simply begin to taper off sooner as high battery voltage is reached. If used for array direct power, the array voltage will be the approximate average module voltage.

When series connecting strings of dissimilar modules, however, the amperage will be approximately that of the weakest module in the string. It pays then, to pay attention to matching the modules connected in series.

Module Mounting


Solar modules perform best when perpendicular to the sun's rays. Because tracking the sun is not always possible, we typically mount the modules facing due south.

A common question is the effectiveness of facing one module to the southeast, one due south and another southwest. While this may sound like a good idea, it is not. All modules facing due south will net the largest amount of power of any other arrangement second only to a sun tracker. Remember that the true south and magnetic south vary upon your site's declination. Call your local airport or us if you do not have this figure.

Tilt angle

Because the sun's position in the sky varies through the year (higher in summer and lower in winter), it's a good idea to provide for seasonal adjustment. The rule of thumb goes: latitude plus 15 degrees angle in winter and latitude minus 15 degrees in summer. Your latitude can be found on any good map of your area.

If you wish to permanently mount the modules and not seasonally adjust the structure, fix your mount at a winter (minimal sun period) angle. This is when sunlight is limited, days are shorter and you want the system maximizing the available power. We offer a wide variety of mounts both fixed and tracking.

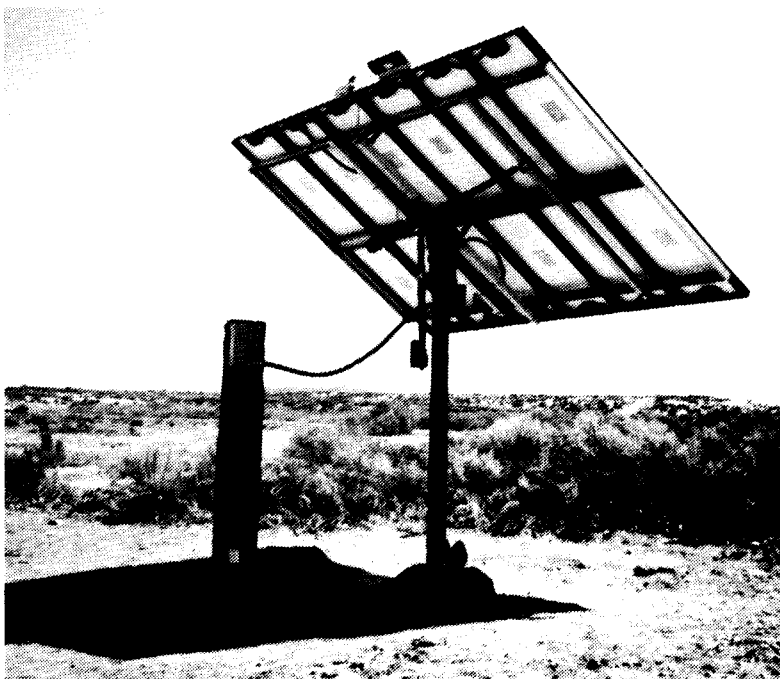

To Track the Sun ... or Not To Track...

Trackers are used to increase the daily output of PV modules by keeping them faced as directly as possible toward the sun. The sun sees a wider surface, and the increased reflectivity that occurs at low angles of incidence is avoided. During the long days of summer when the sun is rising north of east and setting north of west, a tracker can increase the daily output of modules by 25 to 40 percent (we can help determine what you can expect). During the winter when the sun takes a low, short arc above the horizon, the tracker will contribute much less, perhaps 10 to 15 percent. The output of a tracker remains much more constant throughout the year in tropical climates.

We generally recommend trackers for spring, summer and fall applications, such as water pumping for livestock summer

pasture or small scale irrigation. For home power systems, we often do not recommend them because a household's power requirements are generally greatest in the winter just when the efficiency of the tracker is least. It often is a better choice to use a less expensive static mount and put the money into extra modules. In tropical and subtropical regions with less seasonal variation of sun and loads a tracker can make sense for a home system.

When calculating aiming error, rule of thumb is that a 10 degree aiming error will result in a loss of 2% of the solar module output, 20 degree-6%, 30 degree-14%, 40 degree-22%, 50 degree-35%, 60 degree-50%.

This table below compares insolation for fixed and tracking surfaces at three U.S. cities of varying latitudes. We have data for many locations broken down by the month, call if you would like the figures for your area.

	Fixed Array Summer position latitude -15 deg.	Fixed Array Winter position latitude +15 deg.	One Axis Tracking Summer latitude -15 deg.	One Axis Tracking Winter latitude +15 deg	Two Axis Tracking E&W, N&S
Albuquerque, NM					
January	4.49	5.74	5.87	6.84	6.92
July	7.78	6.38	10.45	9.48	10.60
Pittsburgh, PA					
January	2.02	2.38	2.36	2.67	2.69
July	5.59	4.69	7.04	6.42	7.14
Great Falls, MT					
January	2.51	3.07	2.96	3.43	3.46
July	7.62	6.24	11.25	10.37	11.44
Values are equivalent full sun hours per day.					

Wind Driven Generators


**An excellent complement
to any battery system**

Is Wind Generation for you?

Electricity produced by wind generation can be used directly, as in water pumping applications, or it can be stored in batteries for household usage. Wind generators can be used alone, or they may be used as part of a hybrid system, in which their output is combined with that of photovoltaics, and/or a fossil fuel generator. Hybrid systems are especially useful for winter backup of home systems where cloudy weather and windy conditions occur simultaneously.


The most important decision when considering wind power is determining whether or not your chosen site has enough wind to generate the power for your needs, whether it is available consistently, and if it is available in the season that you need it.

The power available from the wind varies as the cube of the wind speed. If the wind speed doubles, the power of the wind (the ability to do work) increases 8 times. For example, a 10 mile per hour wind has one eighth the power of a 20 mile per hour wind. ($10 \times 10 \times 10 = 1000$ versus $20 \times 20 \times 20 = 8000$).

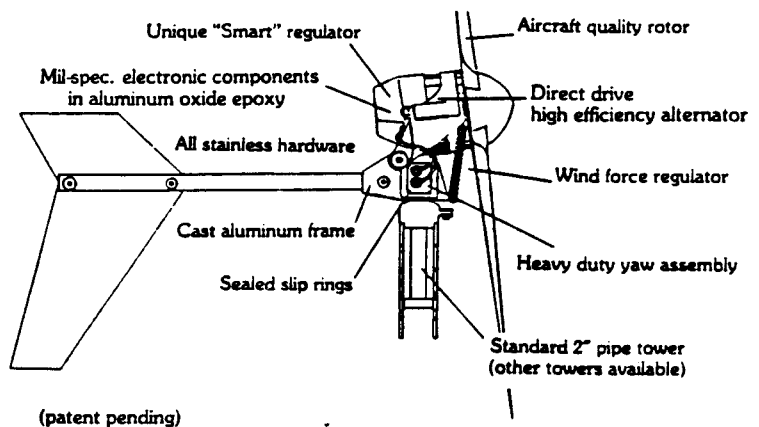

One of the effects of the cube rule is that a site which has an average wind speed reflecting wide swings from very low to very high velocity may have twice or more the energy potential of a site with the same average wind speed which experiences little variation. This is because the occasional high wind packs a lot of power into a short period of time. Of course, it is important that this occasional high wind come often enough to keep your batteries charged. If you are trying to provide smaller amounts of power consistently, you should use a generator that operates effectively at slower wind velocities.

Wind speed data is often available from local weather stations or airports, as well as the US Dept. of Commerce, National Climatic Center in Asheville, N.C. You can also do your own site analysis with an anemometer or totalizer and careful observation.

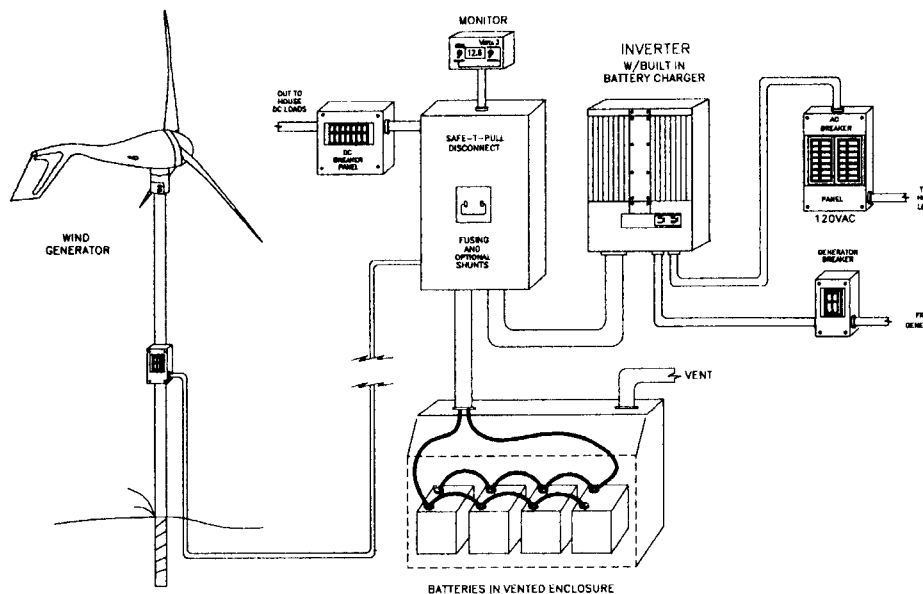

Installation of generators should be close to the battery bank to minimize line loss, and 20 feet higher than obstructions within 500 feet. The tower should be well grounded.

Charge Controllers/Regulators

Why you need a controller

The main function of a controller or regulator is to fully charge a battery without permitting overcharge. If a solar array is connected to lead acid batteries with no overcharge protection, battery life will be compromised. Simple controllers contain a relay that opens the charging circuit, terminating the charge at a pre-set high voltage and, once a pre-set low voltage is reached, closes the circuit, allowing charging to continue. More sophisticated controllers have several stages and charging sequences to assure the battery is being fully charged. The first 70% to 80% of battery capacity is easily replaced. It is the last 20% to 30% that requires more attention and therefore more complexity.

How Controllers Work and Available Options

The circuitry in a controller reads the voltage of the batteries to determine the state of charge. Designs and circuits vary, but most controllers read voltage to reduce the amount of power flowing into the battery as the battery nears full charge. Features that can be included with controllers include:

- **Reverse current leakage protection**- by disconnecting the array or using a blocking diode to prevent current loss into the solar modules at night.
- **Low-voltage load disconnect (LVD)**- to reduce damage to batteries by avoiding deep discharge.
- **System monitoring**- analog or digital meters, indicator lights and/or warning alarms.
- **Overcurrent protection**- with fuses and/or circuit breakers
- **Mounting options**- flush mounting, wall mounting, indoor or outdoor enclosures
- **System control**- control of other components in the system; standby generator or auxiliary charging system, diverting array power once batteries are charged, transfer to secondary batteries.
- **Load control**- automatic control of secondary loads, or control of lights, water pumps or other loads with timers or switches
- **Temperature compensation** - utilized whenever batteries are placed in a non-climate controlled space. The charging voltage is adjusted to the temperature. Recommended on most systems.
- **Central wiring**- providing terminals to interconnect system wiring.

Some systems require all of these functions, others require only one or a certain combination. We can help you select a unit to meet your specific needs.

Sizing a Controller

Charge controllers are rated and sized to the systems they protect by the array current and voltage. Most common are 12, 24 and 48 volt controllers. Amperage ratings run from 1 amp to over 100.

For example, if one module in your 12 volt system produces 3.5 amps and four modules are utilized, we produce 14 amps of current at 12 volts. Because of light reflection and the edge of cloud effect, sporadically increased current levels are not uncommon. For this reason we increase the controller amperage by a minimum of 25% bringing our minimum controller amperage to 18.7. Looking through the products we find a 20 amp controller, as close a match as possible. There is no problem with going to a 30 amp or larger controller, besides possible additional cost. If you think the system may increase in size, additional amperage capacity at this time should be considered.

On small systems where a 10 watt or smaller module charges 100 amp hour battery or larger, no regulator is required. Typically this module to battery ratio cannot overcharge the battery.

Will a controller be included in my powercenter?

Yes, all powercenters include a solar charge controller. In fact, if you are building a system that utilizes an inverter, we recommend looking strongly at utilizing a powercenter. Why? Simply because they are typically more reliable, save time and money.

The controller, array and battery disconnects, monitoring and central wiring can all be handled with one enclosure instead of five or more.

Some owners prefer to purchase their system component by component, and others would rather buy the carburetor with the rest of the vehicle. Whatever your personal preference, we would like to work with you.

Pump or Motor Controllers

Different than the above battery charge controller, these units work in systems that directly link the solar module to a motor, no battery storage is utilized.

These controllers alter the incoming amperage and voltage to what is required by the motor. In low light conditions, modules produce little current yet relatively constant voltage. These motor controllers will reduce the voltage to increase the amperage, starting and running the motor in low light. The effect is an increased motor run time throughout the day, moving more air or water in a day than an array direct system with no controller.

INVERTERS - Introduction

The inverter is a basic component on medium to large systems which converts low voltage DC power from the batteries into high voltage (usually 120 or 240) AC power as needed.

Inverters of the past were inefficient and unreliable. Today's generation of inverters are very efficient (85 to 94%) and very reliable.

Today, the majority, if not all of the loads in a typical remote home operate at 120 VAC from the inverter. The only reason to operate select loads at low voltage DC is to maximize efficiency.

Most inverters we sell produce only 120 VAC, not 120/240 VAC as in the typical utility-connected home. The reason being, once electrical heating appliances are

replaced with gas appliances, there is little need for 240 VAC power. Exceptions include good-sized submersible pumps and shop tools which can either be powered by the generator, step-up transformer, or possibly justify the cost of a larger or second inverter.

Two types of inverters predominate the market – modified sine and sinewave inverters.

Modified sinewave units are less expensive per watt of power and do a good job of operating all but the most delicate appliances. Sinewave units produce power which is almost identical to the utility grid, will operate any appliance within their power range, and cost more per watt of output.

Inverter Component Checklist


While an inverter is a good portion of the cost of a system, it is really a sub-system that includes a number of additional components. To make a safe, reliable installation one should provide the following:

Inverter to battery cabling. Because of the high current required on low voltage circuits, this cable is large, commonly #2 to 4/0 in size. Smaller conductors than required are unsafe and will not allow the inverter to perform to its full rating.

DC input disconnect and overcurrent protection. It is important to have a safe installation with a properly sized DC rated, UL listed disconnect. Typically the disconnect works in conjunction with an overcurrent protection device such as a fuse or breaker. These components are installed in an enclosure which can also house shunts.

Shunts – Used to read the amperage flowing between the battery and inverter, this device is installed in the negative conductor. It can easily be housed in the disconnect or its own enclosure.

AC output disconnect and overcurrent protection. If the breaker panel, which is fed from the inverter, is adjacent to the inverter, then the main breaker will serve as the inverter output disconnect and overcurrent protection. If, however, this panel is not grouped with the inverter, then a separate unit should be installed. This also holds true with AC circuits coming to the inverter from a generator or utility source. A second breaker may be needed if these breakers are not grouped.

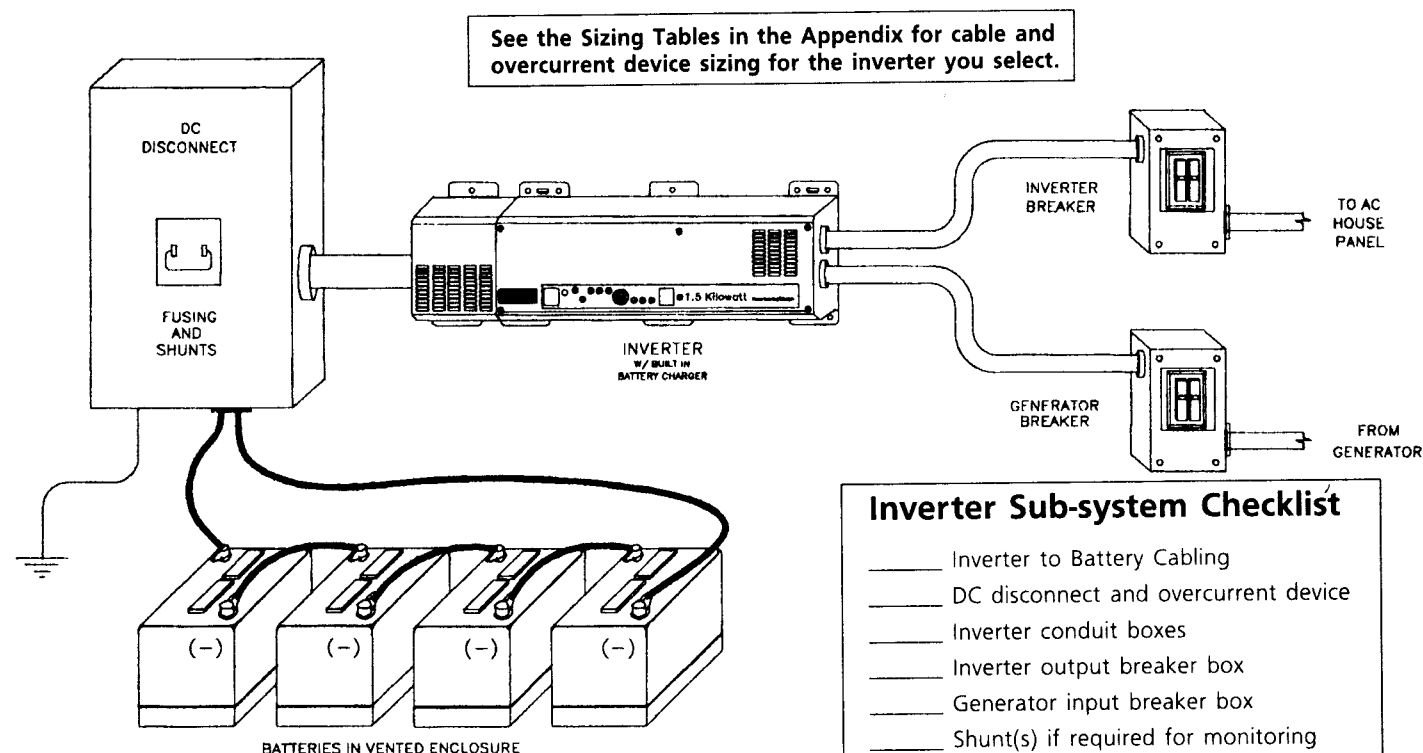

Inverters with Built-In Battery Chargers

Many of today's inverters incorporate battery charging circuitry. This is easily and economically accomplished because of the design of most inverters. Inverters step up low voltage and change DC power to AC power. Battery chargers do the reverse of this. Additional circuitry is all that is required to add a whole second function and economically create an Inverter/Charger.

Transfer switches are also incorporated into these Inverter/Chargers so that the AC loads can be powered directly from the generator when the battery charger is operating.

From a reliability, performance, and economical standpoint, built-in battery chargers are the way to go.

Comparing Inverters

Inverters are compared by three factors:

- **Continuous wattage rating.** Hour after hour, what amount of power in watts can the inverter deliver.
- **Surge Power.** How much power and for how long can an inverter deliver the power needed to start motors and other loads.
- **Efficiency.** How efficient is the inverter at low, medium and high power draws. How much power is used at idle.

Multi-stage Battery Charging

A typical 12 volt lead-acid battery must be taken to approximately 14.2-14.4 VDC before it is fully charged. (For 24 volt systems double these figures.) If taken to a lesser voltage level, some of the sulfate deposits that form during discharge will remain on the plates. Over time, these deposits will cause a 200 amp-hour battery to act more like a 100 amp-hour battery, and battery life will be considerably shortened. Once fully charged, batteries should be held at a considerably lower voltage to maintain their charge – typically 13.2 to 13.4 volts. Higher voltage levels will "gas" the battery and boil off electrolyte, again shortening battery life.

Most battery charger designs cannot deal with the conflicting voltage requirements of the initial "bulk charge" and subsequent "float" or maintenance stage. These designs can accommodate only one charge voltage, and therefore must use a compromise setting – typically 13.8 volts. The result is a slow incomplete charge, sulfate deposit build-up, excessive gassing and reduced battery life.

The charger available in our inverters automatically cycles batteries through a proper multi-stage sequence to assure a rapid and complete charge without excessive gassing.

Factory battery charger settings on our inverter-charger combinations are optimal for a lead acid (liquid electrolyte) battery bank of 250-300 amp hours in a 60° F environment. If your installation varies from these conditions, you will

obtain better performance from your batteries if you adjust the control settings.


The **Maximum Charge Rate** in amps should be set to 20-25% of the total amp-hour rating of a liquid electrolyte battery bank. For example, a 400 amp-hour bank should be charged at no more than a 80-100 amp rate. Excessive charge rates can damage batteries and create a safety hazard.

The **Bulk Charge Voltage** of typical liquid electrolyte batteries should be about 14.4 VDC; gel cells like the Deka about 14.1 VDC. There is no one correct voltage for all types of batteries. Incorrect voltages will limit battery performance and useful life. Check your battery maker's recommendations.

The **Return Amps** setting controls how long the batteries will be held at the bulk charge voltage before dropping to the float/maintenance level. A good setting is 2-4% of the amp hour capacity of a liquid electrolyte battery bank. A fixed, "one-size-fits-all" setting will overcharge a large battery bank (gassing the batteries) and undercharge a small bank (limiting battery performance).


The **Float Voltage** setting should hold the batteries at a level high enough to maintain a full charge, but not so high as to cause excessive "gassing" which will "boil off" electrolyte. For a 12 volt liquid electrolyte battery at rest, a float voltage of 13.2-13.4 is normally appropriate; gel cells are typically maintained between 13.5 and 13.8. If the batteries are being used while in the float stage, slightly higher settings may be required.

Charge voltage guidelines used here are based on ambient temperatures of 60° F. If your batteries are not in a 60° F environment, the guidelines are not valid. **Temperature Compensation** allows easy single dial re-scale of the voltage settings to compensate for the differences between ambient temperature and the 60° F baseline. Temperature compensation is important for all battery types, but particularly gel cell, valve-regulated types which are more sensitive to temperature.

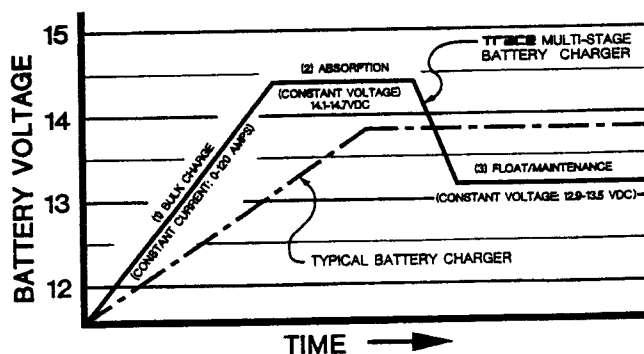

Batteries – The Heart of the System

A Solar Electric system is made up of a number of components, and of these, none needs as much attention as the batteries. Though the idea and usage of a battery bank is very simple, if batteries are neglected, degradation can occur at a fast pace. As someone in the industry once put it, "few batteries die a natural death, most are murdered". The following information is designed to tell you how to get the longest life possible from your battery bank. (This is strictly flooded cell lead-acid battery information; for Alkaline and gel-cell batteries many of these needs and characteristics are completely different.)

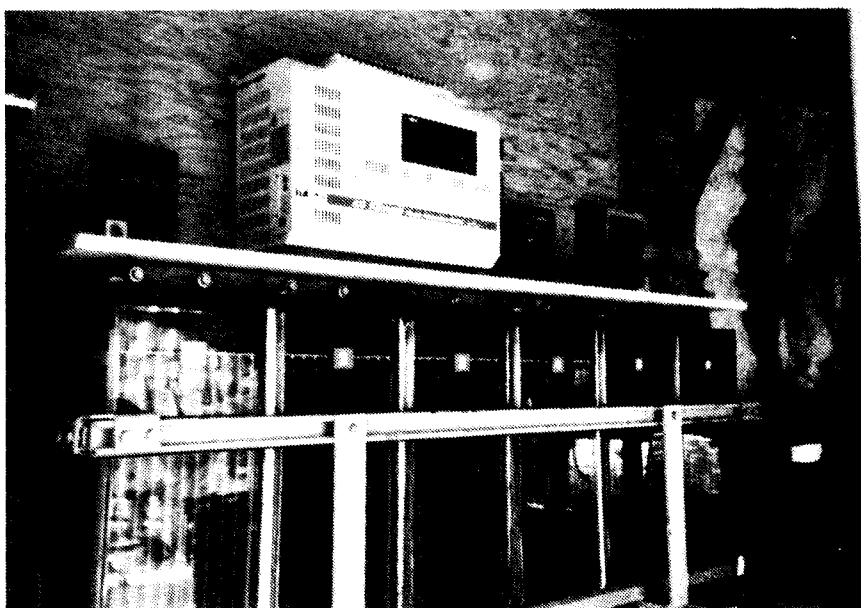

Cycling – Deep versus Shallow

A **cycle** in the battery world occurs when you discharge a battery and then charge the battery back again to the same level. The battery is designed to absorb and give up electricity by a reversible electrochemical reaction. How deep a battery is discharged is termed **depth of discharge**. A **shallow cycle** occurs when the top 20% or less of the battery's power is discharged and then recharged. Some batteries, like automotive starting batteries, are designed for this type of cycling only. The plates of active material are thin with large overall surface area. This design can give up lots of power in a very short time.

The second type of cycle is a **deep cycle** where up to 80% of the battery capacity is discharged and recharged. Batteries designed for deep cycling are built with thicker plates of active material which have less overall surface area. Because of the lessened availability of surface area for chemical reaction, these batteries yield just as much power relative to their size, but do so over a longer period of time. This type of battery design is preferred for a PV system because discharging a battery to a deeper level is normal during extended cloudy weather.


The depth of cycling has a good deal to do with determining a battery's useful life. Even batteries designed for deep cycling are "used up" faster as the depth of discharge is increased. It is common practice for a system to be designed with deep cycle batteries even though the daily or average discharging amounts to a relatively shallow depth of discharge. **Shallow cycle your deep cycle battery for the most cycles.**

Temperature Effects

The speed of the chemical reaction occurring in a lead-acid battery is determined by temperature. The colder the temperature the slower the reaction. The warmer the temperature the faster the reaction and the more quickly the charge can be drawn from the battery.

The optimum operating temperature for a lead-acid battery is around 77 degrees Fahrenheit. You may have experienced this effect when starting a car on a cold morning; the engine just doesn't turn over as quickly. Warm that same battery and you will see a major improvement. (See the bar graph of temperature effects to the left and the temperature derating guidelines in the battery sizing worksheet in the Appendix.) For this reason we like to see batteries placed indoors or in a heated and ventilated space to maintain them between 55 and 80 degrees. If we do install them in a unheated space, battery capacity must be increased to compensate for this derating. High temperatures can drastically shorten the life of the battery and should be avoided.

Comparison of short term power available from a fully charged battery at various temperatures

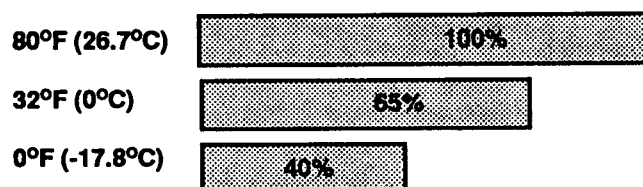

Batteries - continued


Self Discharge

Due to impurities in the chemicals used for battery construction, batteries will lose power to local action, an internal reaction which occurs whether we are using the battery or not. This slow discharging is termed **self-discharge**. Self-discharge rates vary greatly among battery types and varies with temperature. The rate also increases with the age of a battery, so much so that an old battery may require a significant amount of charging just to stay even. Even new batteries may lose 1 to 2% of charge per day. Lead calcium grid batteries have the lowest self-discharge rates.

Battery Power Conversion Efficiency

Energy is never consumed or produced, it merely changes form. The efficiency of conversion is never 100% and in the case of new batteries ranges from 80 to 90%.

This means that to discharge 100 watts of power from a battery it must be charged with 110 to 120 watts of power.

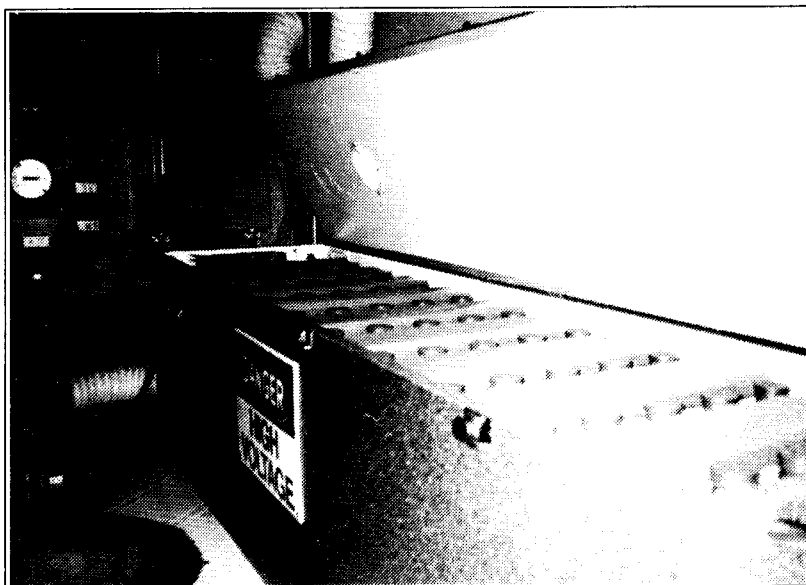

Determining Battery State of Charge

Battery state of charge is determined by reading either terminal voltage or the specific gravity of the electrolyte.

The density or **specific gravity** of the sulfuric acid electrolyte of a lead-acid battery varies with the state of charge. The density is lower when the battery is discharged and higher as the cells are charged. See the table to the left; this is because the electrolyte is part of the chemical reaction, it changes as the chemical reaction takes place. Specific gravity is read with a hydrometer. A hydrometer reading will tell the exact state of charge. A hydrometer cannot be used with sealed or gel-cell batteries.

Another important point is freezing. At low densities, the electrolyte contains enough water that the battery can freeze. This is not a problem with PV systems where the batteries are kept both warm and charged. Batteries can survive and operate in a cold location, but the charge level should not be so low that it could freeze.

Battery Voltage

Voltage meters are used to indicate battery state of charge. They are relatively inexpensive and easy to use. The main problem with relying on voltage reading is the high degree of battery voltage variation through the working day. Battery voltage reacts highly to charging and discharging. In a PV system we are usually charging or discharging and many times are doing both at the same time. As a battery is charged the indicated voltage increases and as discharging occurs, the indicated voltage decreases.

These variations may seem hard to track, yet in reality they are not. A good accurate digital meter with a tenth of a volt calibration can be used with success. The pushing and pulling of voltage, once accounted for by experience, can also help indicate the amount of charging or discharging that is taking place.

(continued on next page)


Percentage of Charge	12 volt Battery Voltage	24 volt Battery Voltage	Specific Gravity
100	12.70	25.40	1.265
95	12.64	25.25	1.257
90	12.58	25.16	1.249
85	12.52	25.04	1.241
80	12.46	24.92	1.233
75	12.40	24.80	1.225
70	12.36	24.72	1.218
65	12.32	24.64	1.211
60	12.28	24.56	1.204
55	12.24	24.48	1.197
50	12.20	24.40	1.190
45	12.16	24.32	1.183
40	12.12	24.24	1.176
35	12.08	24.16	1.169
30	12.04	24.08	1.162
25	12.00	24.00	1.155
20	11.98	23.96	1.148
15	11.96	23.92	1.141
10	11.94	23.88	1.134
5	11.92	23.84	1.127
Discharged	11.90	23.80	1.120

Specific gravity values can vary + or -.015 points of the specified values. This table is for the Trojan L-16 battery in a static condition, no charging or discharging occurring, at 77 degrees F. **Discharging or charging will vary these voltages substantially.**

Source - Trojan Battery Company.

Batteries - continued

By comparing voltage readings to hydrometer readings and shutting off various charging sources and loads and watching the resulting voltage changes, the system owner can learn to use indicated voltage readings with good results.

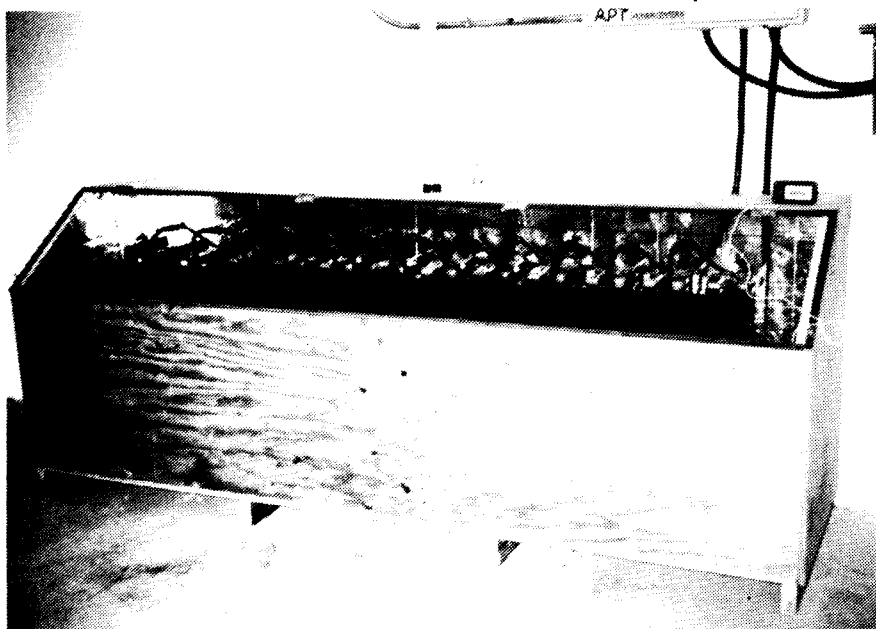

Monitoring and Maintenance

Monitoring battery state of charge is the single largest responsibility of the system owner. The battery voltage should be kept at or above a 50% state of charge for maximum battery life. See the battery voltage table.

Keep the battery's electrolyte level to the indicated level and never let the plates be exposed above the electrolyte. Use only distilled water - not tap water, when refilling the batteries. Water is the only element used by your battery. You should never have to add acid to your battery. Do not over-fill the batteries or fill when the batteries are discharged. Over-watering dilutes the acid excessively and electrolyte will be expelled when charging.

Gassing

As batteries are charged they create bubbles of gas, produced when the chemical reaction can not keep up with the energy input. Some gassing is necessary in flooded cell batteries. The amount and duration of gassing varies from one battery to another. Gassing mixes the electrolyte and compensates for the tendency of the acid to stratify with the most dense electrolyte on the bottom. Gassing is the product of splitting water molecules into hydrogen and oxygen. This consumes water and creates the need for its periodic replacement.

"Cold cranking amps" is not a usable measure of total amperage capacity of a deep cycle battery. It instead measures the high rate (30 seconds) discharge ability of a battery at zero degrees Fahrenheit. For almost all photovoltaic systems, these conditions are very abnormal.

Corrosion

A slight acid mist is formed as the electrolyte bubbles upon charging. This mist is highly corrosive, especially to the metallic connectors on the tops of the batteries. Inspect for corrosion and clean these periodically as needed with baking soda and water. Corrosion buildup can create a good deal of electrical resistance, which can contribute to shortened battery life and the waste of power. It's always a good idea to wear goggles and protective gear as the sulfuric acid will eat holes in your clothes.

Equalization

Equalization is the controlled overcharging of a fully charged battery. This overcharge mixes the electrolyte, evens the charge among varying battery cells and reduces permanent sulfation of the battery plates. It is energy invested in lengthening the life of the battery. Though the PV system battery bank receives a good deal of cycling and gassing through normal activity, we believe that equalization is a complement to this activity and as a rule of thumb should be done every 60 to 90 days.

The equalization process consumes water and produces much gassing. Make sure your batteries are well ventilated during this charging. Equalization charging voltages vary widely, as do duration times, so the batteries should be monitored closely during this process. Check specific gravities of all your cells at the start, noting any low cells. Check periodically during the process. You don't have to check every cell each time, but watch any that show a higher variation. Keep checking electrolyte densities until you receive three readings of 30 minutes apart which indicate no further increase of specific gravity values. Keep a record of individual cell voltages and specific gravities before and after equalizing. Equalization will take your voltage to 15 volts or higher (30 volts on a 24 volt system) so make sure any DC loads are disconnected before you begin.

Battery Connections

The connections from battery to battery and on to the charging and load circuits are critical. Terminals should be greased, interconnects should be clean and fastening hardware should be tight. Torquing all bolts equally avoids variations in resistance. This is also the reason we prefer to minimize the number of parallel strings in the bank. Higher resistance values on one string of batteries results in less charge to that string and consequently shorter life. We also place the main negative and positive on opposing corners of the battery bank for this reason. The goal is to keep the variation of resistance from one cell to another to a minimum.

Battery Enclosures

Install your batteries in a warm, dry location. 55-80 degrees F. is the optimum temperature range; lower or higher than this and performance diminishes significantly.


Because batteries produce a potentially explosive mixture of hydrogen and oxygen, venting is needed to prevent a buildup. Since hydrogen is lighter than air it has a tendency to rise. If venting is placed at the top of the battery enclosure and air is brought in from the bottom, this gas will move up and out of the battery area. When possible, power venting of the battery enclosure to the outside is a wise move.

Also remember that most basements will draw air, not expel air, if not power vented.

Pre-built battery enclosures are used in remote lighting systems or anywhere a battery bank is installed where protection from tampering and weather is required. Large home battery bank enclosures are typically custom built. Banks of one to four batteries for water pumps, automatic lighting, telemetry or radio equipment are often installed in one of our off-the-shelf enclosures. These enclosures can be mounted on the ground or up on a pole behind the array to provide a higher degree of protection from vandals.

Another option here is to place the batteries out-of-doors in a heated outbuilding. You can also place the batteries on the outside of an exterior wall with the control and power conditioning directly through the wall indoors.

Keeping the batteries simultaneously warm and adequately vented can be challenging, yet with proper planning is not that difficult.

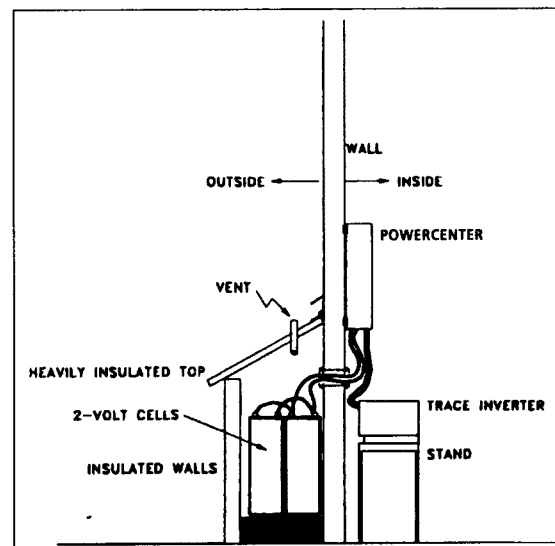

Battery Type	Appropriate Amp Hrs. of Capacity	Number of Cycles to 80% Depth Discharge
Automobile - 12 volt	60-70	20
R.V., marine - 12 volt	100	200
Golf cart - 6 volt	220	250
Mining Vehicle - 6 volt	350	500
2 volt industrial cells	100-1500	1500

Used Batteries

Used lead acid batteries, especially large two volt telephone type cells can sometimes be found for sale. While used solar modules and inverters are usually an acceptable risk, used batteries are a high risk proposition. Should you consider them? In our experience, it is difficult to know just how an older battery has been used. Has the previous user taken good care of the cells or have they been neglected? Have they actually been load tested or just cleaned up and recharged? Our recommendation is to get as much information as you can on the cells, and load test them, or ask the seller for a load test. Without this test you are really guessing as to the remaining life.

If you are considering telephone cells, realize that they are normally shallow cycle lead calcium grid construction, and should not be used in a system designed for deep cycle use.

Overcurrent Protection

Batteries have the potential to discharge incredible amounts of power over a very short period of time, melting conductors and possibly starting a fire.

This is why we spend so much time and energy on overcurrent protection. It is not so much the PV module that we need to protect against, but the batteries. PV modules are current limited which reduces the danger, yet modules and their conductors also require protection. The idea of a fuse or breaker is to include a "weak link" in each circuit which will open if the current exceeds that which the conductor can safely handle.

In a typical PV system, we deal with both AC and DC power. Standard components purchased at building supply stores are typically rated for AC use. These are fine for inverter output circuit protection.

DC overcurrent devices required between the battery, inverter, controller and modules are much more specialized. They are generally heavier duty and more costly.


Of primary importance is to place a current limiting fuse and disconnect on the main battery conductor and assure that all components on the DC side are rated for DC use.

If you are installing your own system, please obtain a copy of the National Electric Code, work with your inspector and be safe. We offer and suggest the publication, "PV Power Systems and the N.E.C. Suggested Practices," free to anyone who is interested.


MONITORS

Proper monitoring of a system should not be overlooked. Typically we want to know how much power is coming into the system from its charging sources and the state of charge of the battery bank at any point in time. A third and equally important value is how much power is being used by the systems loads.

Small systems usually monitor state of charge, or battery voltage and possibly incoming amperage. Medium and larger sized systems typically require a measurement of outgoing power as well, so one can keep track and not over discharge the battery bank.

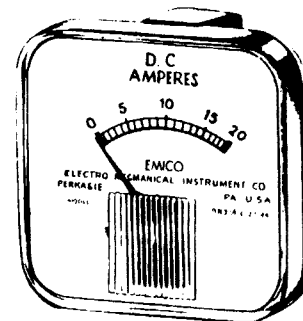

Shunts

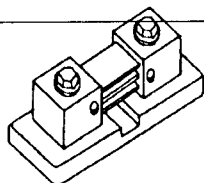

What is a shunt? A shunt is a device used to measure large DC current, typically the current flowing to and from your battery bank. In more detail a shunt is a precision resistor which produces a very accurate voltage drop when current is passed through the unit. This voltage drop is proportional to the amount of amperage flow, therefore by reading the millivoltage one can observe current flow on a properly calibrated meter.

Do you need a shunt? Depending upon the monitor you select, you may! Small meters with low currents may contain their own shunt, usually those less than 30 amps.

Larger and more complex monitors usually require an external shunt. While some units include a shunt, some do not.

Where is a shunt installed? In the main negative conductor from the battery bank. The shunt is placed close to the battery, bank, typically, in the disconnect enclosure for convenience. Since the shunt produces a voltage drop in millivolts we can run this circuit for a good distance with very small conductors. The monitor can be in the battery room or a good distance away.

Sizing? A 1 to 1 shunt produces 1 millivolt drop per 1 amp of current, therefore 100 mv - 100 amp shunt would read 100 amps at 100 millivolts. A 10 to 1 shunt such as a 50 mv - 500 amp shunt offers less resistance and drops only 50 mv with 500 amps of current. Select a shunt for the maximum sustained current of which you will draw. This is usually determined by the inverter size.

Instantaneous and Cumulative Information

Common meters report current flow or battery state of charge (voltage) at a single point in time - the present. This type of metering is termed instantaneous. Devices which report instantaneous information are less complex and less expensive and can give a general idea of what's happening. Several of the Controller/Regulator units we sell combine metering functions for reduced costs. When reading battery voltage one must fully understand the pushing and pulling effects of battery voltage to use this type of monitoring. (See Battery section).

Cumulative type monitors usually include instantaneous information, but go a step further by recording the power over time. With this information, termed amp hours or watt hours, we can see just how much power we generated yesterday or last month, and how much power was consumed, and with much greater accuracy, determine battery state of charge.

Which ever monitor you select, make sure you have a window, so to speak, of the information you require; without it, you are only guessing and guessing is a common killer of batteries.

Many of the monitors listed here are compatible with the our Powercenters.

Lightning Protection

Lightning presents a potential hazard for systems with exposed conductors and aluminum framing mounted on rooftops or adjacent to a building. Direct and close-in strikes can damage sensitive electronic circuitry through the presence of static charges and electromagnetic fields. These forces can induce voltage surges and may damage the system's wiring and components, particularly if your system is not properly grounded and protected.

While no lightning protection system is foolproof, practical counter-measures are available and include a lightning rod at the PV source, adequate system grounding, and surge protection on the incoming DC wires and the secondary AC wiring.



Water Pumping with Solar Electricity

Pumping water with power from the sun is a natural. As the diagram on the right indicates, there are a number of ways to design solar pumping systems. For the remote home owner who utilizes a battery bank, pump types are less varied.

The two major water systems for domestic use divide by water source. If your water source is shallow (less than 15' vertical) from your pump location, a shallow well or surface pump will suffice. These pumps are less expensive, operate at low voltage DC and are of positive displacement design which increases overall system efficiency.

If your water source is a deep well, then a submersible pump is typically the answer. We offer the complete line of solar powered SolarJack DC submersibles, and AC submersibles that operate directly from inverters.

With both of these systems you need to provide pressure to charge your pressure/storage tank as well as bring the water into the house. This requires a pressure switch to automatically turn your pump on and off as water is needed. Another way to create pressure is to pump the water from the water source up to a tank substantially higher than the home. To produce 40 lbs. of pressure, the holding tank would need to be 92 feet above the highest outlet in the house. If this resource is available – great, but installing a gravity system can easily far exceed the cost of a pressure tank and switch.

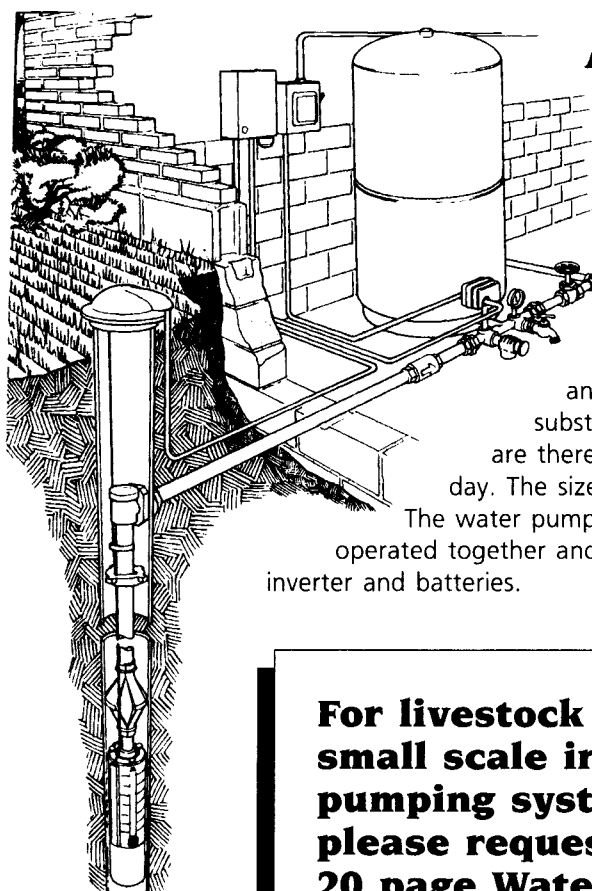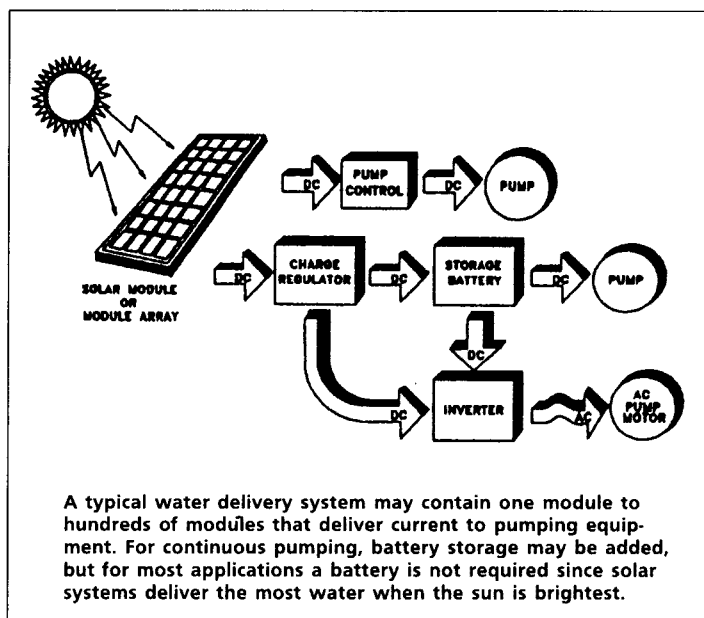

AC Submersible Pumps


In home systems where a battery bank and an inverter are planned or in place, an AC 117 VAC submersible pump is a good option. Especially where wells are 20 ft. deep or more. These centrifugal pumps provide excellent reliability and long life. These units provide a substantial volume of water per minute and are therefore operated for a short time per day. The size and type of inverter is critical here.

The water pump and washing machine are usually operated together and both require surge ability from your inverter and batteries.

For livestock or small scale irrigation pumping systems, please request our 20 page Water Pumping Catalog.

SOLAR WATER PUMPING


Design & Products Guide

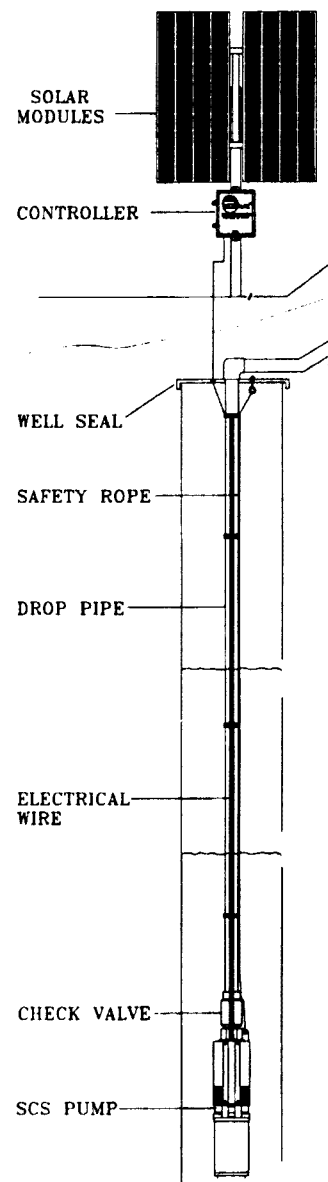

Refrigeration –

Your options for energy efficient refrigeration

Next to space heating and air conditioning, the largest single energy user in your home is the kitchen refrigerator. A typical AC powered refrigerator uses more than 3500 watt hours per day. If this refrigerator is run by a solar electric system whose DC power is inverted to

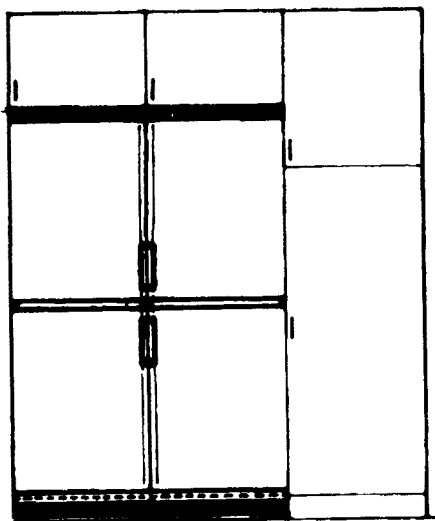

Two units with reversible hinges can be set side by side for increased space.

AC by an efficient inverter, then the refrigerator/freezer alone will consume more power than 10 (50 watt) solar electric modules can produce per day. This could be a very expensive way to provide refrigeration.

However, there are three good refrigerator options available for the off-grid, solar-powered residence; gas powered refrigerators, DC refrigerators and ultra-efficient, AC refrigerators. Gas powered, absorption, refrigerator/freezers are the most common solution for off grid refrigeration. In use in thousands of full time homes and vacation cabins, the propane-fueled refrigerator/freezer units are very reliable and efficient – typically using less than three gallons of fuel per week. Since they don't use electricity, your residential solar electric system can be smaller and less costly. Today's absorption refrigerator/freezers are very quiet and safe. The only drawback to these units is that they are smaller than a traditional home refrigerator. The average gas refrigerator is 8 cubic ft. – approximately 1.5 cu. ft. of freezer and 6+ cu. ft. of refrigerator. If the doors are reversible (such as on a Norcold) then two units can be placed side by side to provide 16 cu. ft. of refrigerator/freezer space.

Another traditional refrigerator solution is the DC refrigerator. These units are the most efficient, electric-powered refrigerator/freezers available. A 16 cu. ft. unit, in a temperate climate, uses less than 800 watt hrs. per day (the power typically produced by four, 50 watt solar electric modules). Many energy saving features are built


into each DC refrigerator such as extra insulation, compressors located on the top of unit to avoid heating the cabinet if located below, and separate freezer doors.

These reliable units are more expensive than the other options because they are hand built in small factories. The higher initial cost, however, is off-set by the savings in solar system componentry and life-time fuel cost.

The final option is a relatively recent alternative; the ultra efficient AC refrigerator. These units, though using more power than DC units, can still be comfortably run by a solar electric system. A typical 16 cubic ft. refrigerator/freezer uses 1500 watt hrs. per day (using approximately the power of six to eight 50 watt modules, in a temperate climate). Usually they are very moderately priced and feature amenities not offered in the other alternatives such as: fresh food section located above freezer section, many compartments and shelves, double door layers in freezer section and fast-freeze options.

Ultra efficient AC chest type freezers are also available. These very affordable units only use 500 watt hrs. of electricity per day (roughly the power produced by two or three solar electric modules).

Though requiring a little more forethought than just going down to the local appliance store and picking out a refrigerator/freezer that matches your kitchen, today's efficient refrigerator options are affordable, reliable, aesthetically pleasing and most importantly, work well with solar electric power.

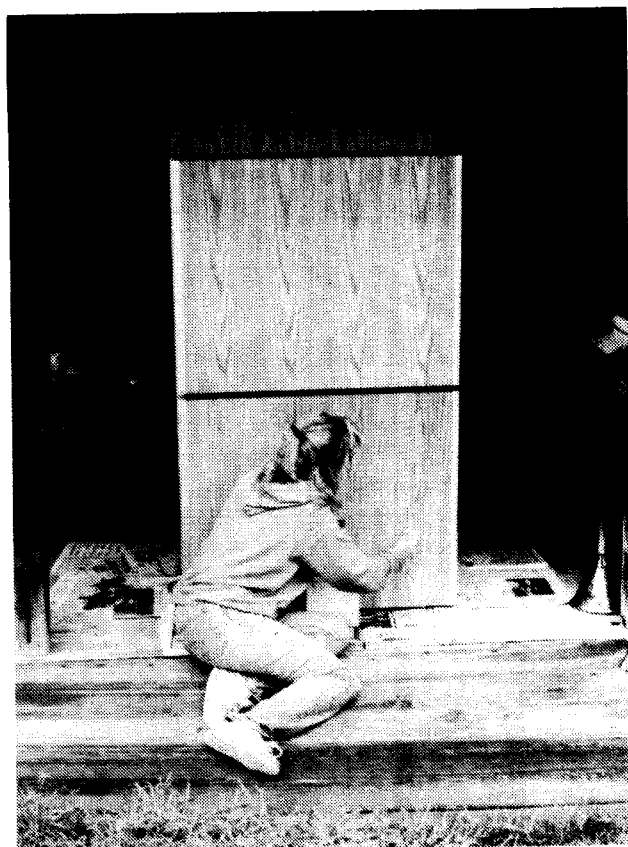

Backup Generators for PV Systems

We typically use generators as a supplement to photovoltaic power. There are some very large applications for which continuous-use generators may prove more cost-effective than a PV system, but in almost all of the applications with which we work, the economics of generators are maximized by restricting them to providing backup power.

Generators are used for backup in situations where seasonal variability of insolation is substantial as in cloudy climates, or for systems where occasional very large loads are powered, as for intermittent use of large shop tools or a deep well pump in a residence. We typically design residential PV systems to provide 80 to 90 percent of the home's annual electrical power. The last 10 to 20 percent is more economically supplied by a generator.

The reason for this is simply economics. In many cases we would double the cost of the system to provide this last 10 to 20 percent of annual power. It is much more

cost effective to employ a backup source of power during the least sunny time of the year.

The cost per kilowatt hour of electricity produced by a generator used in conjunction with a battery bank and inverter is much cheaper for residential type load profiles than is power produced by a continuously running generator. This is because engine-driven generators perform poorly when under-loaded. Low-load hours on the engine, especially diesel, can actually age it more than hours under full load. Fuel costs suffer too. A 6500 watt generator, for example, powering a 100 watt load will consume perhaps 50% as much fuel as it would consume if operating at full capacity. Therefore, work the generator near its capacity for shorter periods and then shut it down. Batteries can be charged while washing machines, pumps or other large loads are running. This maximizes efficiency while reducing generator run time, wear, and fuel costs.

Generators and Battery Charging

Battery chargers take the 120 volt AC power from the generator and convert this power to low voltage DC. They are typically the largest consumer of the generator's output.

Many of today's inverters incorporate a battery charger and transfer switch as optional or even standard equipment. These chargers are powerful, charging the batteries at a high rate and requiring a good sized generator to power them. We recommend a generator of at least 4 to 5 kw in size for full time remote homes. Remember that these inverter/chargers also include an automatic transfer switch. This switch selects among the two sources of AC power to be delivered to the loads – inverter or generator power. The switch is biased to inverter power which is supplied to the loads whenever the generator is off. Once the generator is started, the switch senses the presence of generator voltage,

waits a pre-determined "warm-up" period then switches over, allowing generator power to flow to the loads.

The generator power is now running all loads in the house as well as powering the battery charger. Therefore the generator should be sized to not only run the battery charger at a high rate, but also any AC loads that may be running at the same time.

If the generator is undersized for the loads being run, the battery charging rate will be reduced. This may mean the generator is run for a very long time to fully charge the batteries.

So how do you avoid this problem that many have experienced? Simply select a good-sized battery charger and generator when designing your system. This is not the place to cut the budget, as generator fuel can cost you dearly.


Generator Placement and Powersheds

Powersheds are a common outbuilding on the remote homestead. They often serve multiple functions of housing the generator, batteries and power conditioning equipment required with your PV system. Beyond this, they can also house tools and equipment as well as support the solar array if placed in a sunny, non-shaded area. It is a good idea to keep flammable fuels and gasses in a separate building rather than the building in which one sleeps.

The sound insulation qualities of a powershed offer another advantage.. There is nothing like driving up a beautiful mountain to a picturesque home site, then being greeted by the howling of a generator as you step out of your truck. Powersheds can be placed a distance from living spaces, decks and the like.

If you are thinking of a powershed to house your PV components, don't forget that your batteries are most efficient between 60° and 80°F. In cold climates, the tremendous amounts of heat given off by the generator can aid in heating the space. Propane catalytic heaters with thermostats can also help. Excess heat can also be a problem if the generator is not properly ventilated to the outside.

Another good idea is to install DC lighting in your shed. With battery direct DC power, you will still have light when servicing your AC equipment.

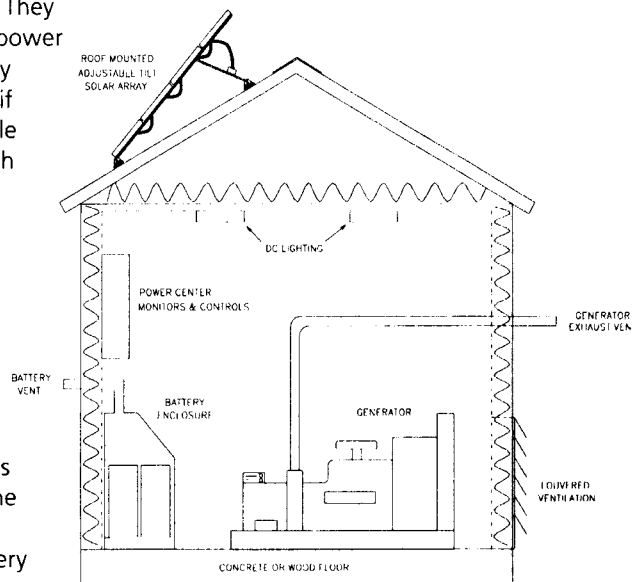

Recreational Vehicle Systems

Solar modules and RV's with batteries are a natural match.


Since batteries are charged when traveling, RV's normally depend mostly on the vehicle's alternator for the primary power source. Power to charge the battery bank is also provided through a converter when plugged into the utility. However, for those who like to spend days, weeks (or longer) not traveling and not plugged in, photovoltaics can mean freedom. And, because a PV array can put as much power into your batteries during an hour of bright sun as a small gasoline generator, it can also mean reclaiming peace and quiet. As well, the RV's existing battery bank and fuse box make the transition to solar a smooth and economical one.

While most of our RV systems utilize 1 to 2 modules, it is important to analyze your power needs. Just as with all PV systems, you need to consider the wattage of the appliances and lights you are powering as well as the average hours used each day. Average daily usage can be calculated on the worksheets in the appendix. Unlike most other systems, however, RV's travel through different regions of climate, park at varying angles to the sun, sometimes in shade and sometimes not. People with similar vehicles can have very dissimilar power usage and patterns of travel. These factors should be considered. If you have any questions about how to go about this, please give us a call.

Buy now and save later.

Your Solar Charging System will pay for itself several times over by increasing battery life and reducing the amount of money you spend on campground hook-ups and generator maintenance. Batteries that are "deep cycled" too many times or sit idle for several months can be permanently damaged. Solar modules provide a daily maintenance charge to your batteries and eliminate this problem. By recharging every day, the depth of discharge is reduced, and battery life and performance are greatly improved.

Give yourself the power to go anywhere with the most powerful charging systems under the sun.

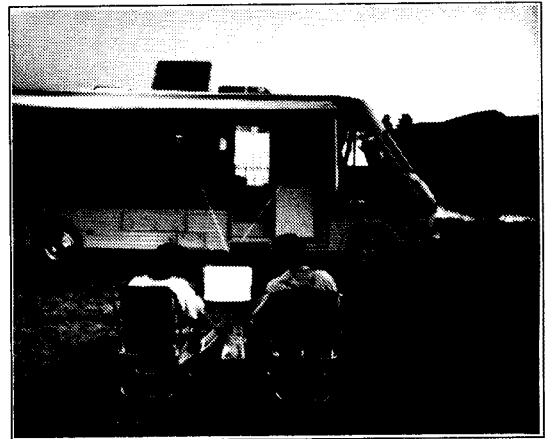

"This was a relatively simple installation. It works very well; not only does it 'trickle-charge' the two RV batteries when the RV is parked, but it also makes it possible to go 'dry camping' for about a week without shore power."

Stan and Jan Claussen, Santee, CA

Keeps batteries charged, Summer or Winter.

Solar panel output is dependent on light intensity and exposure time in the sun. You'll be amazed at how much power your system provides on a bright day. And even in cloudy weather, your panels will produce power although at a lower output.

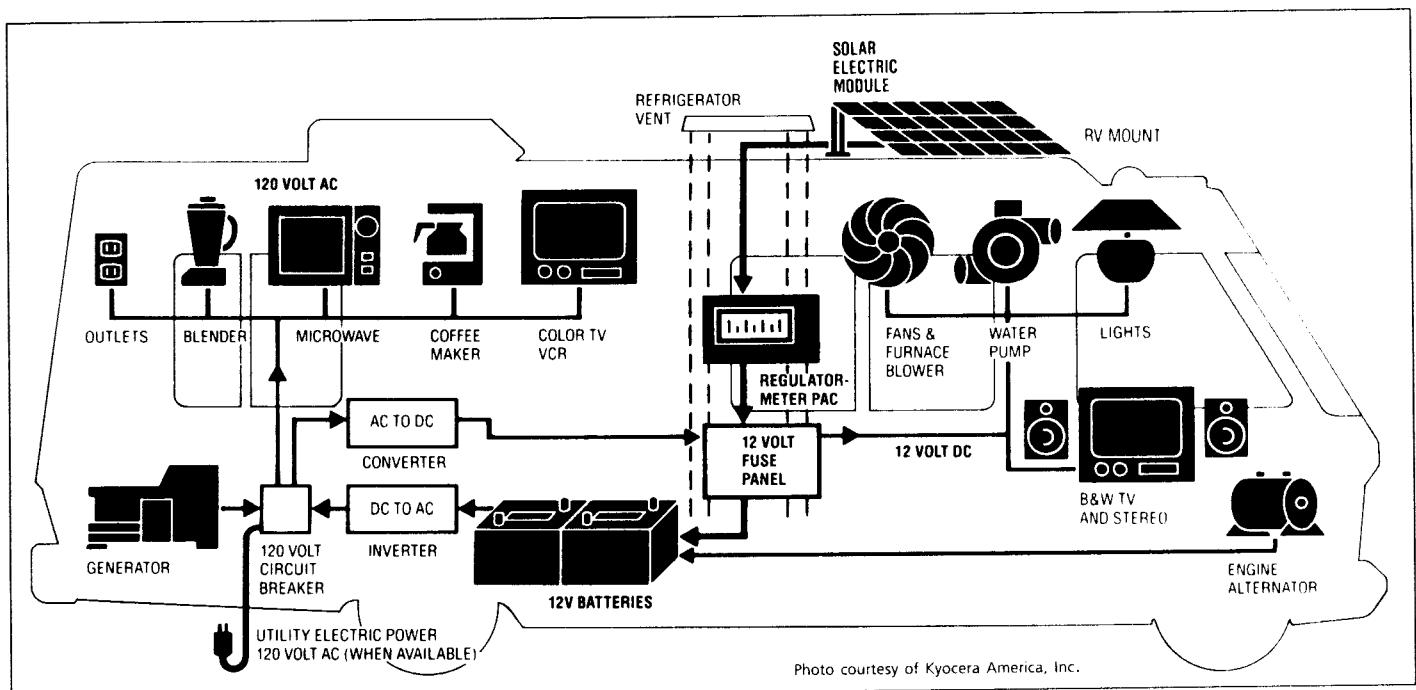


Photo courtesy of Kyocera America, Inc.

RV/Cabin Systems A size that's just right for any RV or Cabin

These systems work as well on the roof of an RV as they do on the roof of your remote vacation cabin. The packages listed here include everything you need, including a detailed installation booklet, to complete your installation in an afternoon. We do not include batteries as they are standard on RVs.

Solar Traveller Kit - STK-64

This package includes an unbreakable Uni-Solar 64 watt solar module, an advance pulse width modulating controller to prevent battery over-charging, 30 feet of cable, flat mount structure, installation booklet, and all hardware required to complete the installation to your RV's existing battery. We even include a tube of silicon seal to prevent any leaks from bolt and wire entry holes.

Solar Traveller Kit - STK-32

This package includes the unbreakable Uni-solar 32 watt solar module. All the features that we listed above are included in this package to facilitate easy installation. Both kits include a controller which is sized for future module expansion of more than double the module's amperage.

All of these kits can be expanded for increased charging capability. Adjustable mounting structures which allow the module to be tilted to the sun angle are also available, please call.

Larger systems are available

We have designed RV systems that utilize up to sixteen power modules. The only limit is the amount of space on your roof. If you are interested in a larger system, please call; we will be happy to design a custom system for you.

Installation is easy and fast

Sunelco Solar Charging Systems come complete with everything needed for a simple and professional installation. Systems include Uni-Solar modules, flat mounting brackets, wiring harness, complete installation hardware and detailed instructions.

Most do-it-yourselfers can install their system in a couple of hours, or if you prefer, it can be installed at nearly all RV dealerships.

Sunelco Solar Charging Systems operate automatically, and are compatible with your RV's existing wiring, battery, and charging systems. Once installed, your Solar Charger becomes an integral part of your 12 volt system.



Installation in 5 easy steps

- Fasten solar panel(s) to the roof using the flat mount structure.
- Mount the Regulator/Meter Pac on an inside wall near the refrigerator.
- Run electrical wire down behind the refrigerator via the roof vent.
- Connect one end of the wire to the panel and the other end to the back of the Regulator.
- Run another wire between the Regulator and the house battery – or to the 12 volt DC fuse panel.
- Sit back and let the sun do the work!

CABIN Example System

100 to 500 Watt Array 12 Volts Nominal* AC and DC Loads

Fixed Module Mount
Stacking Vertical Configuration
Roof Mounted


Perfect for the energy conscious homeowner or vacation cabin. This system will provide a combination of 12 volt DC and 120 volt AC power without the noise and hassle of a generator. Enjoy the benefits of silent electricity such as music, lighting, pressurized delivered water – all at your perfect "get-away" spot.

Example system power production

830 watt hours daily from a 5 hour equivalent day.

Batteries - 12 volt - 86 amp hour each, sealed type

Inverter - 1500 watt modified sine with built-in battery charger

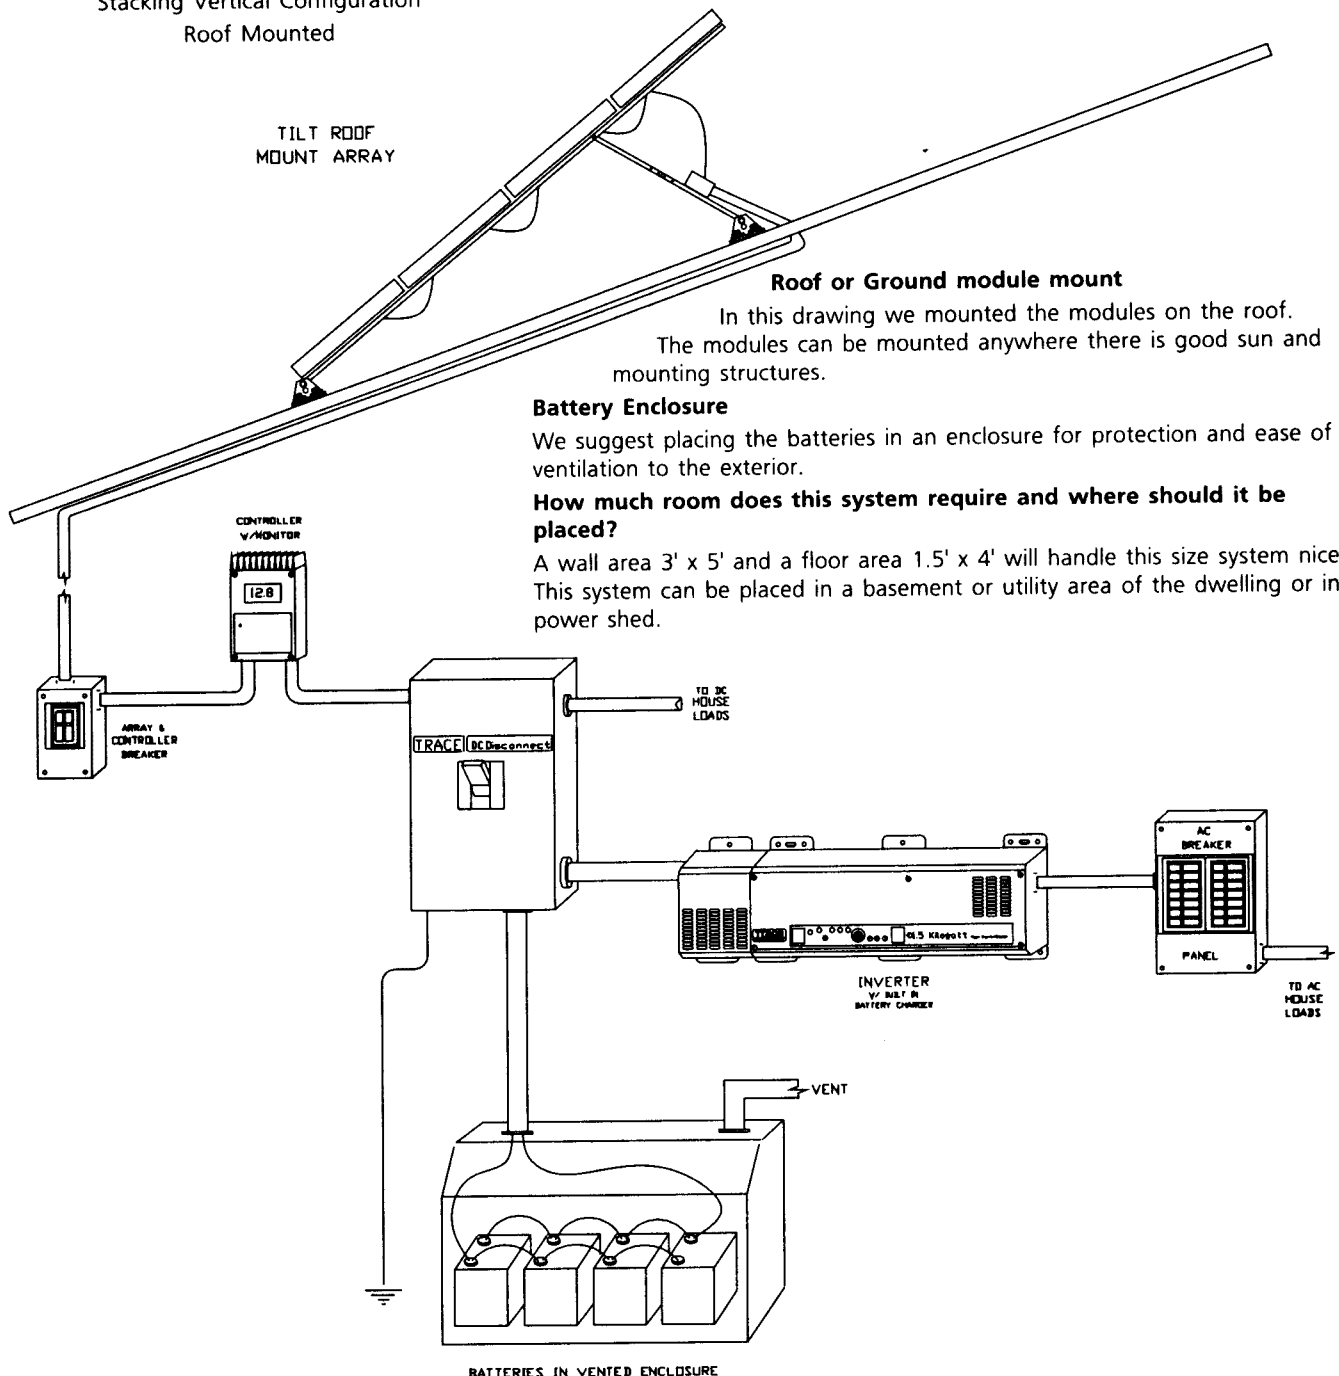

Roof or Ground module mount

In this drawing we mounted the modules on the roof. The modules can be mounted anywhere there is good sun and mounting structures.

Battery Enclosure

We suggest placing the batteries in an enclosure for protection and ease of ventilation to the exterior.

How much room does this system require and where should it be placed?

A wall area 3' x 5' and a floor area 1.5' x 4' will handle this size system nicely. This system can be placed in a basement or utility area of the dwelling or in a power shed.

*This system could easily be configured to 24 volts. However, 12 volt appliances are much easier to locate than 24 volt units. An inverter and common 117 VAC appliances alleviates this problem.

CABIN Example System

The system outlined here should serve as a guideline. The price will vary depending upon your requirements and the specific components you select. A generator can be included with this system if required.

Component Description	Catalog Page #	Specifications	Your System Item	Price
<u>Solar Modules</u>				
2-6 modules typical 40-85 watts each	31-36	4-51 watt modules.		
<u>Module Mount Structure</u>				
Fixed or tracking, roof, ground or pole mount for selected number and size modules.	38-40	Roof top mount - fixed, vertically stacked. 4 modules		
Module interconnects weatherproof material incasing wiring between modules.	37	Appropriate number and length.		
Combiner enclosures and breaker for parallel connections at array.	37	Breaker Box w/ breaker.		
Cable run from combiner box to Controller Breaker Box total out and back distance.	78	Appropriate length and size cable.		
Controller Breaker Box - protects controller and cabling.	76-77	Breaker Box with 2 pole breaker.		
<u>Controller</u>				
Prevent battery overcharge. Amperage rating determined by array size, monitoring can be included in unit.	49-53	12 to 40 amp, 12 volt controller w/built in monitor.		
<u>Main Battery Fused Disconnect</u>				
Protection of all circuits from battery overcurrent. Current limiting breaker and disconnect. Also serves as central wiring enclosure. Misc. control area cabling.	77	Main DC Breaker Disconnect - 175 amp, 1 pole.		
Battery Cabling from batteries to disconnect, and inverter.	79	Appropriate length and size cable. One set of 2/0 inverter/battery cable of appropriate length.		
<u>Battery Bank*</u>				
2 to 6 - six or twelve volt battery building blocks	61-62	4-12 volt solar batteries.		
Battery interconnects - cables between batteries	79	Heavy gauge, appropriate number & lengths.		
Battery bank enclosure protects batteries and people, provides for battery ventilation to out-of-doors.	59	4-battery fiberglass box with ventilation pipe fitting.		
<u>DC Breaker Box</u>				
Disconnect protection for each DC circuit. Breaker required for each circuit.	76	DC rated, size determined by numbers of breakers required.		
<u>Inverter/Charger</u>				
for AC power 250-2500 watt inverter with built in battery charger and transfer switch, if required.	66-75	Appropriately sized inverter with conduit enclosure.		
AC Distribution/Breaker Box for inverter output		AC rated, size determined by number of breakers/circuits required.		

Total Value \$3,200⁰⁰ to \$4,800⁰⁰

*Battery maintenance kit suggested, includes detailed battery book, anti-corrosion spray and hydrometer.
Not included - ground rod & clamp, miscellaneous wire and hardware. Digital multimeter is suggested for installing and maintaining this system.

GENVERTER Example System

Generator/Inverter/Battery

By coupling an existing generator to a battery charger, battery bank and inverter, efficiencies are increased and costs are reduced.

Previously, the most common power source for homes off the utility line was a gas or diesel generator. As long as this generator is run close to its rated capacity, efficiencies are maximized and costs are kept relatively low. However, this is usually not the practice. Many generators without battery banks are run 16 hours a day or more at only a small fraction of their potential power. This results in the cost per kilowatt hour of electricity going sky high.

Now consider the addition of a battery bank, a battery charger which operates whenever the generator is run, and an inverter which powers the AC loads from the battery bank whenever the generator is off. This can reduce daily generator run time and dramatically reduce the cost of power. In some instances, efficiency can be increased even further by sizing the generator to run occasional very large loads and thus avoiding the need for an extra-large inverter and additional battery capacity.

In this type of system (which we term a "genverter"), a transfer switch, either manual or automatic, is utilized. This switch receives power from either the generator or the inverter and passes only one source to the loads.

Many inverters have three of the major components necessary for this system. The inverter, battery charger and transfer switch are designed into one unit.

An option for this type of system which increases efficiencies even further is the addition of select DC loads such as refrigeration which can be powered directly from the batteries.


You will notice this system drawing to be very similar to the other system schematics. In fact the only major difference is the lack of solar modules, mount structure and controller.

PROBLEM:

On a budget that prevents you from buying the complete system you need and you already have a generator?

SOLUTION:

Start with a working portion of your system as detailed here, adding solar or wind generators as your budget allows. Solar modules and wind generators can easily be added incrementally.

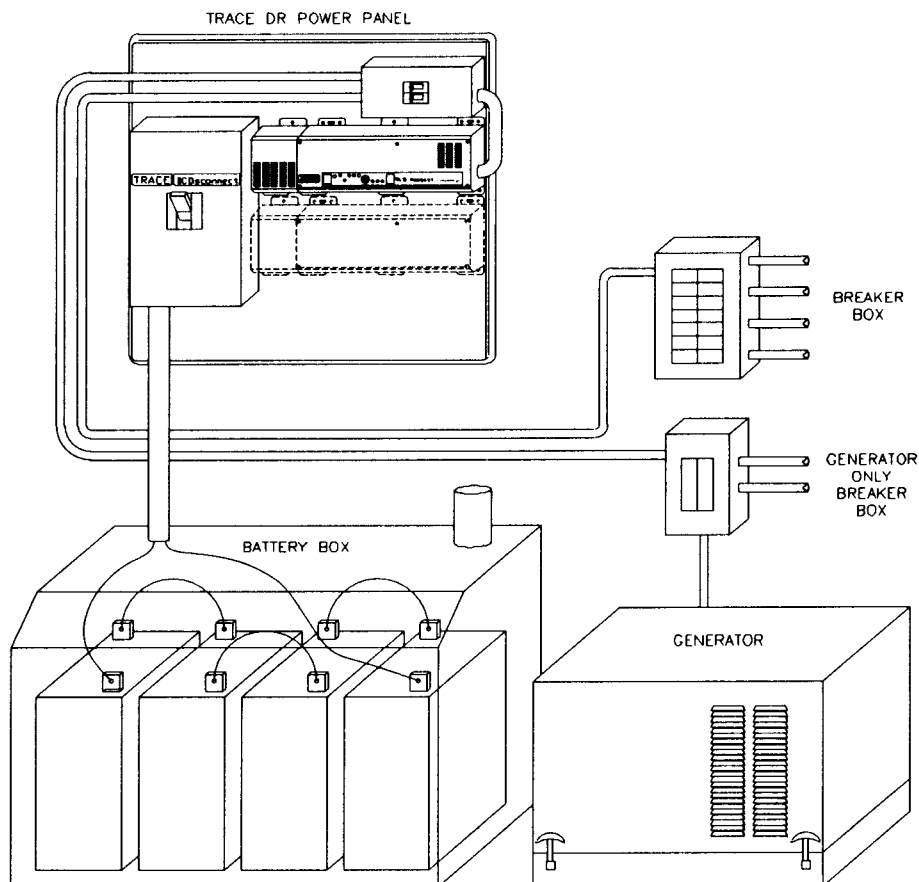

GENVERTER Example System

Generator/Inverter/Battery

The system outlined here should serve as a guideline. The price will vary depending upon your loads and the exact components you select.

Component Description	Catalog Page #	Specifications	Your System Item	Price
<u>Battery Bank</u>				
From 220 to 1500 amp hr. Typically 24 volt.	60-62	4 - L16 Batteries*		
Battery Interconnects cables between batteries.	79	3 - 12" - 2/0 gauge interconnects.		
Battery/Inverter cables cables between battery and disconnect and disconnect to inverter.	79	One set of 10' - 4/0 or 2/0 cables		
Battery enclosure	59			
<u>POWER PANEL SYSTEM:</u>				
This system encompasses a number of components including:				
<u>Main Battery Breaker Disconnect</u>				
Protection of all circuits from battery overcurrent. Also serves as central wiring enclosure with shunt and negative ground block.	77	One or two pole - 175 to 250 amp breaker disconnect		
<u>Inverter(s)</u>				
Converts DC battery power to AC power. Typically 1,500 to 5,500 watts modified or full sine wave. AC disconnect/bypass breaker box.	66-75	Single inverter/charger w/built in Transfer switch. 24 volt input.		
<u>Monitor</u>				
Reads voltage and amperage flows from the battery charger and to the inverter.	54-55	Instantaneous or cumulative meter w/shunt		
<u>AC Distribution Panel</u>				
Provides breaker space and distribution of AC power to circuits	76	Six to sixteen position AC distribution box w/breakers		
<u>Generator Breaker Panel</u>				
Protects cables from generator, handles generator only loads.	76	Two to six position AC distribution panel w/breakers		
Total Value \$11,600⁰⁰ to \$14,200⁰⁰		Total Value \$3,600⁰⁰ to \$6,200⁰⁰		
with 10 KW generator.		without generator.		

*Battery maintenance kit suggested. Not included - ground rod & clamp, miscellaneous wire, hardware and conduit.


WIND POWERED Example System

Wind Generators add versatility to your charging regime

Wind generators are an excellent compliment to many battery based systems. One or more wind chargers can easily be added to the genverter system described here, or to any of our example systems. Many wind generators include built in battery overcharge protection so the only other components necessary are the tower, power cabling and a designated DC circuit breaker at the central wiring enclosure.


The addition of a wind generator diversifies the charging sources which in turn, increases the overall system reliability and can extend battery life by maintaining higher average states of charge.

Total Value \$550⁰⁰ to \$5,800⁰⁰ per wind generator.

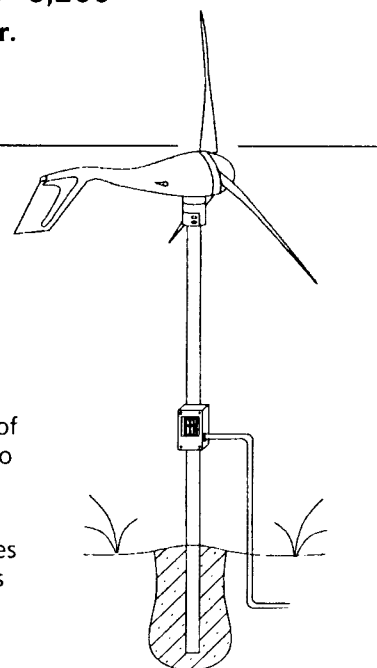

RESIDENTIAL Example System

400 to 1000 Watt Array
24 Volts Nominal
Primarily AC Loads,
Select DC Loads

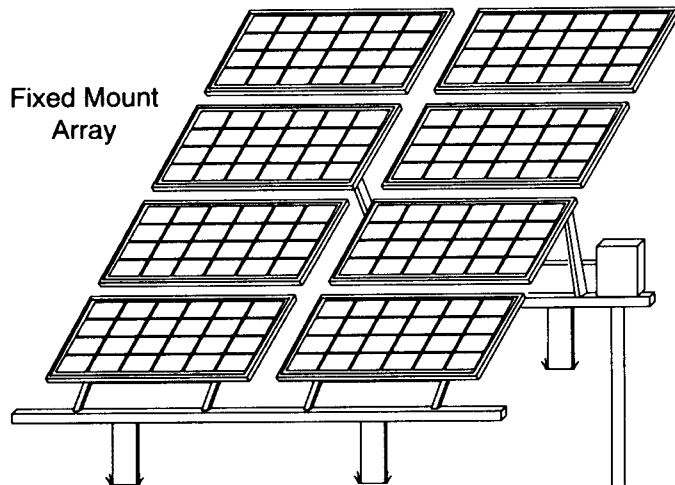

Fixed Mount
Array

Typical full time home system or large vacation part-time home. This is a very common remote home system size. The solar array, batteries, or inverter size can be customized to your specific needs easily, giving you the most power for your dollar. Based on use of gas refrigerator.

Example system power production

1800 watt hours daily from a 5 hour equivalent day.

Batteries - L-16 type, 6 volt, 300-370 amp hours.
Inverter - 2,400 to 5,500 watt modified sinewave with built-in battery charger and transfer switch.


Power conditioning and storage placement - dwelling basement or utility area, powershed or container.

Combiner,
Breaker,
and Lightning
Protection
Enclosure

This is one of our most popular systems. The monitor can be installed in the power room or remote, possibly in the living area of the house.


Wall space required for the system is typically 4' x 5' and floor space for the battery bank is 2' x 4.5'.

A popular addition to this system is a single DC light fixture to light the control area, providing light in the control room even when the inverter is shut down.

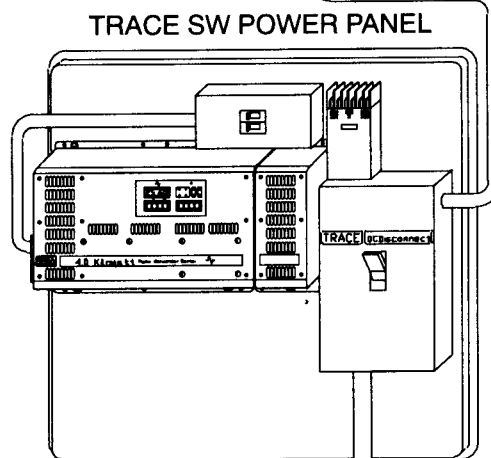

TRACE SW POWER PANEL

This drawing illustrates how a PV system breaks down into three major sub-systems. **Array** at the top, **Power Conditioning** at page center, and **Battery Bank** below. We can easily take any of these sub-systems and alter the others. For example, the array or battery systems could vary greatly in size.

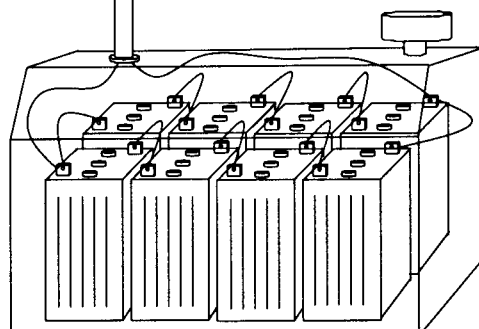

Battery Bank

RESIDENTIAL Example System

The system outlined here should serve as a guideline. The price will vary depending upon your requirements and the specific components you select.

Component Description	Catalog Page #	Specifications	Your System Item	Price
<u>ARRAY SUB-SYSTEM</u>				
Solar Modules				
6-12 Modules 51 to 85 watts each typical	31-36	8-60 watt modules		
Module Mount Structure				
Fixed or Tracking roof or ground or pole mount for selected number and size modules	38-40	2-4 module, fixed, vertical mounts		
Module Interconnects weatherproof conduit incasing wires between modules	37	Appropriate number and length.		
Combiner Enclosure with breaker for parallel connections at array with optional lightning protection	37	Breaker enclosure with two breakers and lightning protection.		
Cable run from combiner box to controller breakers total footage out and back	78	Appropriate length and size cable.		
<u>POWER CONDITIONING SUB-SYSTEM</u>				
<u>POWER PANEL:</u>				
These panels encompass a number of components including:				
Array Disconnect/Breaker	76-77			
Controller				
Prevents battery overcharge Amperage rating determined by array size	49-53	40 amp, 24 volt controller with circuit breaker & digital volt meter.		
Main Battery Fused Disconnect				
Protection of all circuits from battery overcurrent Current limiting fuses and disconnect Ground terminal strip included.	77	Single pole 175 to 250 amp breaker disconnect.		
Monitor				
Reads battery state of charge, current in and out of battery. Unit may also read cumulative amp hours remaining in battery.	54-55	Shunt included with monitor.		
Battery cabling - from batteries to disconnect Disconnect to Inverter	79	2/0 to 4/0 cable set of appropriate length.		
DC Load Breakers				
Overcurrent protection for each DC circuit.	76-77	DC rated, one breaker of appropriate amperage for each circuit.		
Inverter				
For AC power Includes built in battery charger and transfer switch. 2,400 to 5,500 watts continuous typical Inverter output breaker box and breakers	66-75	One 4000 watt sinewave inverter/charger 24 volt, input		
Protects and distributes AC power from inverter. Generator input breaker box and breaker required if main generator breaker is not within reach.		AC rated, size determined by number of breaker/circuits required. Two place breaker box with breaker		
<u>BATTERY BANK SUB-SYSTEM</u>				
Battery Bank	61-62			
8 to 12 - six volt batteries from 220 to 370 amp hours typical Battery interconnects - cables between batteries		8 - 6 volt, L16 type batteries Heavy gauge, appropriate number and lengths. Sized to number, dimensions, and arrangement of batteries.		

Total Value \$7,800⁰⁰ to \$9,900⁰⁰

A second inverter can be added easily for additional capacity and 240 VAC loads.

Battery maintenance kit suggested, includes detailed battery book, anti-corrosion spray and hydrometer. A digital multimeter is suggested for maintaining and installing this system. Not included - ground rod & clamp, miscellaneous wiring, and miscellaneous hardware.

POWERLINE Example System

800 to 4,000 Watt Array
24 or 48 Volts Nominal
All AC Loads

For the serious homeowner with needs for a large amount of household power. This homestead system incorporates an array with sinewave power conditioning and heavy duty long-lived two volt batteries. The back up generator allows for annual low sun periods and/or the flexibility of additional power when needed.

Example system power production

3,700 watt hours daily from a 5 hour equivalent day.

Solar Array - Fix mounted on ground, roof or pole mounts. Tracking pole mounts also available

Batteries - 2 volt cells in 3 cell trays, flooded or sealed type.

Inverter - sinewave inverter/charger.


Power conditioning and storage placement -

Basement, powershed or container.

Remote monitoring and generator start/stop.

Wind generator for diversity of charging sources.

Propane generator for battery charging during prolonged no-sun periods.

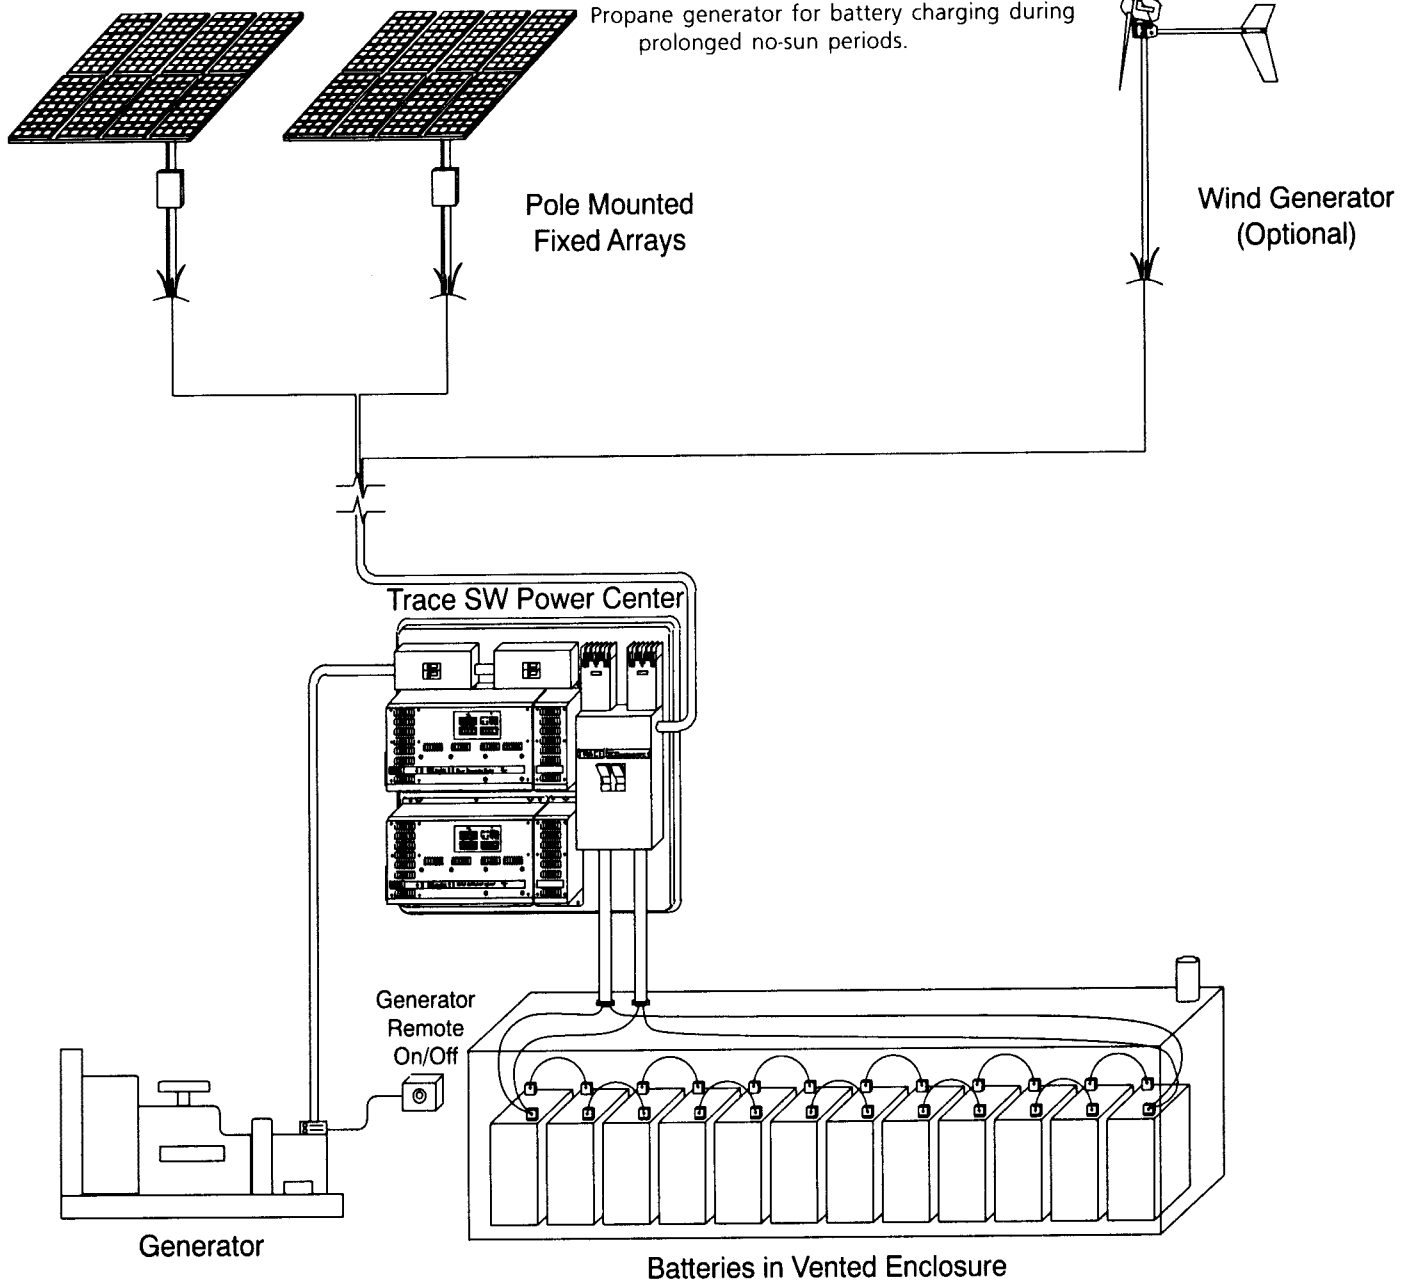

POWERLINE Example System

The system outlined here should serve as a guideline. The price will vary depending upon your requirements and the specific components you select. The larger the system, the more options that are available.

Component Description	Catalog Page #	Specification	Your System Item	Price
<u>ARRAY SUBSYSTEM</u>				
<u>Solar Modules</u>				
12 to 48 modules typical 51 to 120 watts each	31-36	16 -80 watt modules		
<u>Module Mount Structure</u>				
Fixed or tracking, roof or ground mount for selected number and size module	38-40	Pole mounted, fixed structure 8 modules per structure.		
Module interconnects Weatherproof conduit encasing wiring between modules	37	Appropriate number and length.		
Combiner enclosures for parallel connections at array	37	Parallel combiner boxes w/built-in lightning protection.		
Lightning protection - SOV in combiner box.	81			
Cable run from combiner box to powercenter total footage - out and back	78-79	Appropriate length and size cable.		
<u>POWER CONDITIONING SUBSYSTEM:</u>				
Power panel includes:				
Array Disconnect Breaker	76			
Controller Prevents battery overcharge Amperage rating determined by array size	49-53	Two 40 amp controllers, 24 volt with circuit breakers & digital volt meters.		
Main Battery Fused Disconnect Protection of all circuits from battery overcurrent Current limiting fuses and disconnect Ground terminal strip included.	76-77	Two pole 175 to 250 amp breaker disconnect.		
Monitor Reads battery state of charge, current in and out of battery. Unit may also read cumulative amp hours remaining in battery. Battery cabling - from batteries to disconnect Disconnect to Inverter	54-55	Shunt included with monitor. On board and remote monitoring. 2- 4/0 cable sets of appropriate length from batteries to power panel 2 4/0 cable set from power panel to inverter.		
Inverter AC power from the battery bank 4,000 watts to 8,000 watts typical. AC input breaker protects inverter output circuits.	66-75	Two sinewave 24 volt inverter/charger(s) 4,000 to 8,000 watt continuous output. One-two place breaker box and one breaker		
<u>BATTERY BANK SUBSYSTEM</u>				
<u>Battery Bank</u>				
24 or 48 volts typical 700 to 3,000 amp hours capacity typical 2 volt cells as building blocks	60	24 volt system - 12 cells of 1359 amp hour each		
Generator 6.5 to 12 KW typical Propane fuel, remote start/stop. Generator breaker box protects generator powered circuits.	63-65	Slow speed, sound attenuated, stationery unit. One six place breaker box and 4 breakers		
Total Value \$16,000⁰⁰ to \$28,000⁰⁰ without generator.				
<u>Wind Generator Option</u>				
300 to 3,000 watt unit typical with controller	41-43	900 watt wind generator - 3 blade with controller		
Cable run from wind plant to powercenter total footage - out and back	78	Appropriate size and length.		
Add \$600⁰⁰ to \$2,400⁰⁰ per wind generator.				

Battery maintenance kit suggested, includes detailed battery book, anti-corrosion spray and hydrometer.
Not included - ground rod, miscellaneous wire and hardware, wind generator mast, poles for mount structures, propane plumbing and ventilation system for generator.

Wire loss table - 5%

This is a five percent table which means at these amperage ratings at the listed distances, 5% of the power would be lost to friction. Five percent is normally acceptable in low voltage systems, but if you want a 2% figure, divide the given distances by 2.5. For a 10% loss multiply the distance by 2. For distances at 48 volts, double the 24 volt distances for a 5 percent loss figure. For 240 volt 5% loss, double the 120 volt distances. These distances include the NEC requirement for current oversizing of 25%.

Example: For a pump drawing 9 amperes at 24 volts, located 88 feet from the battery bank: look at the center table for 24 volts. In the far left column find the next number higher than 9 (which is 10) and follow that line across the table until you find a distance figure greater than 88. At the top of the column find the gauge of wire (#8) that should be used. This method insures that wire losses are kept to an acceptable level without spending too much money on extra-heavy cable. Using a heavier wire than indicated, however, will result in even higher efficiencies and we do sometimes invest in the next larger gauge.

In the lower left corner of each table you will see some blank entries. These denote amperage flows that exceed the "ampacity" of the wire, where power loss is so severe that the heat buildup threatens to melt the wire. Do not use these configurations!

Amps in Wire	Wattage at 120V	#14	#12	#10	#8	#6	#4	#2	1/0	2/0	3/0	1 2 0 V o l t s
1	120											
2	240	422.25	656.25									
4	480	187.5	328.5	516								
6	720	141	225	328.5	562.5							
8	960	103.5	159.75	272.25	422.25	666						
10	1200	84.75	131.25	216	337.5	534.75						
15	1800	56.25	84.75	131.25	225	356.25	562.5					
20	2400		65.63	103.5	1~8.75	272.25	422.25	675				
25	3000			84.75	131.25	216	337.5	543.75				
30	3600			65.63	112.5	178.5	281.25	450	722.25			V o l t s
40	4800				84.75	131.25	216	337.5	543.75	675.00		
50	6000				67.5	103.5	171	272.25	431.25	543.75	684.75	


Amps in Wire	Wattage at 24V	#14	#12	#10	#8	#6	#4	#2	1/0	2/0	3/0	2 4 V o l t s
1	24	169.5	262.5	412.5	675							
2	48	84.75	131.25	207	337.5	532.5						
4	96	37.5	66	103.5	169.5	267						
6	144	28.5	45	66	112.5	178.5	282					
8	192	21	32.25	54	84.75	133.5	216					
10	240	17.25	26.25	43.5	67.5	107.25	169.5	270				
15	360	11.25	17.25	26.25	45	71.25	112.5	180	289.50			
20	480		13.5	21	37.5	54.75	84.75	135	217.50	270.00	343.50	
25	600			17.25	26.25	43.5	67.5	108.75	172.50	217.50	274.50	V o l t s
30	720			13.5	22.5	36	56.25	90	144.75	180.00	228.00	
40	960				17.25	26.25	43.5	67.5	108.75	135.00	171.00	
50	1200				13.5	21	34.5	54.75	86.25	108.75	137.25	

Amps in Wire	Wattage at 12V	#14	#12	#10	#8	#6	#4	#2	1/0	2/0	3/0	1 2 V o l t s
1	12	84.75	131.25	206.25	337.5	532.5						
2	24	42.23	65.63	103.5	168.75	266.25	432	675				
4	48	18.75	32.85	51.6	84.75	133.5	216	337.5	543.75	675.00		
6	72	14.1	22.5	32.85	56.25	89.25	141	225	360.75	450.00	570.00	
8	96	10.35	15.98	27.23	42.23	66.6	108	168.75	272.25	337.50	427.50	
10	120	8.48	13.13	21.6	33.75	53.48	84.75	135	217.50	270.00	342.75	
15	180	5.78	8.48	13.13	22.5	35.63	56.25	90	144.75	180.00	228.00	
20	240		6.6	10.35	16.88	27.23	42.23	67.5	108.75	135.00	171.75	
25	300			8.48	13.13	21.6	33.75	54.38	86.25	108.75	137.25	V o l t s
30	360			6.6	11.25	17.85	28.13	45	72.23	90.00	114.00	
40	480				8.48	13.13	21.6	33.75	54.38	67.50	85.50	

These are one-way distances, measured from point A to point B. The out and back nature of electrical circuits has already been included.

Battery Installation and Wiring

Batteries may be wired in either series or parallel configuration. When a battery is wired **in series** the positive terminal is wired to the next battery's negative terminal. This increases the voltage while maintaining amperage of the two batteries. With **parallel** wiring the positive terminal is wired to the next battery's positive terminal, and the negative to the next negative. This arrangement increases amperage while maintaining voltage. One common mistake is to believe that both amperage and voltage will increase when wiring batteries together. It will not; only one value will increase with respect to the arrangement. A battery bank may combine both series and parallel wiring configurations. Series strings of batteries are used to achieve the correct voltage, then a number of these series strings are attached in parallel to increase the amp hours of the total battery bank.

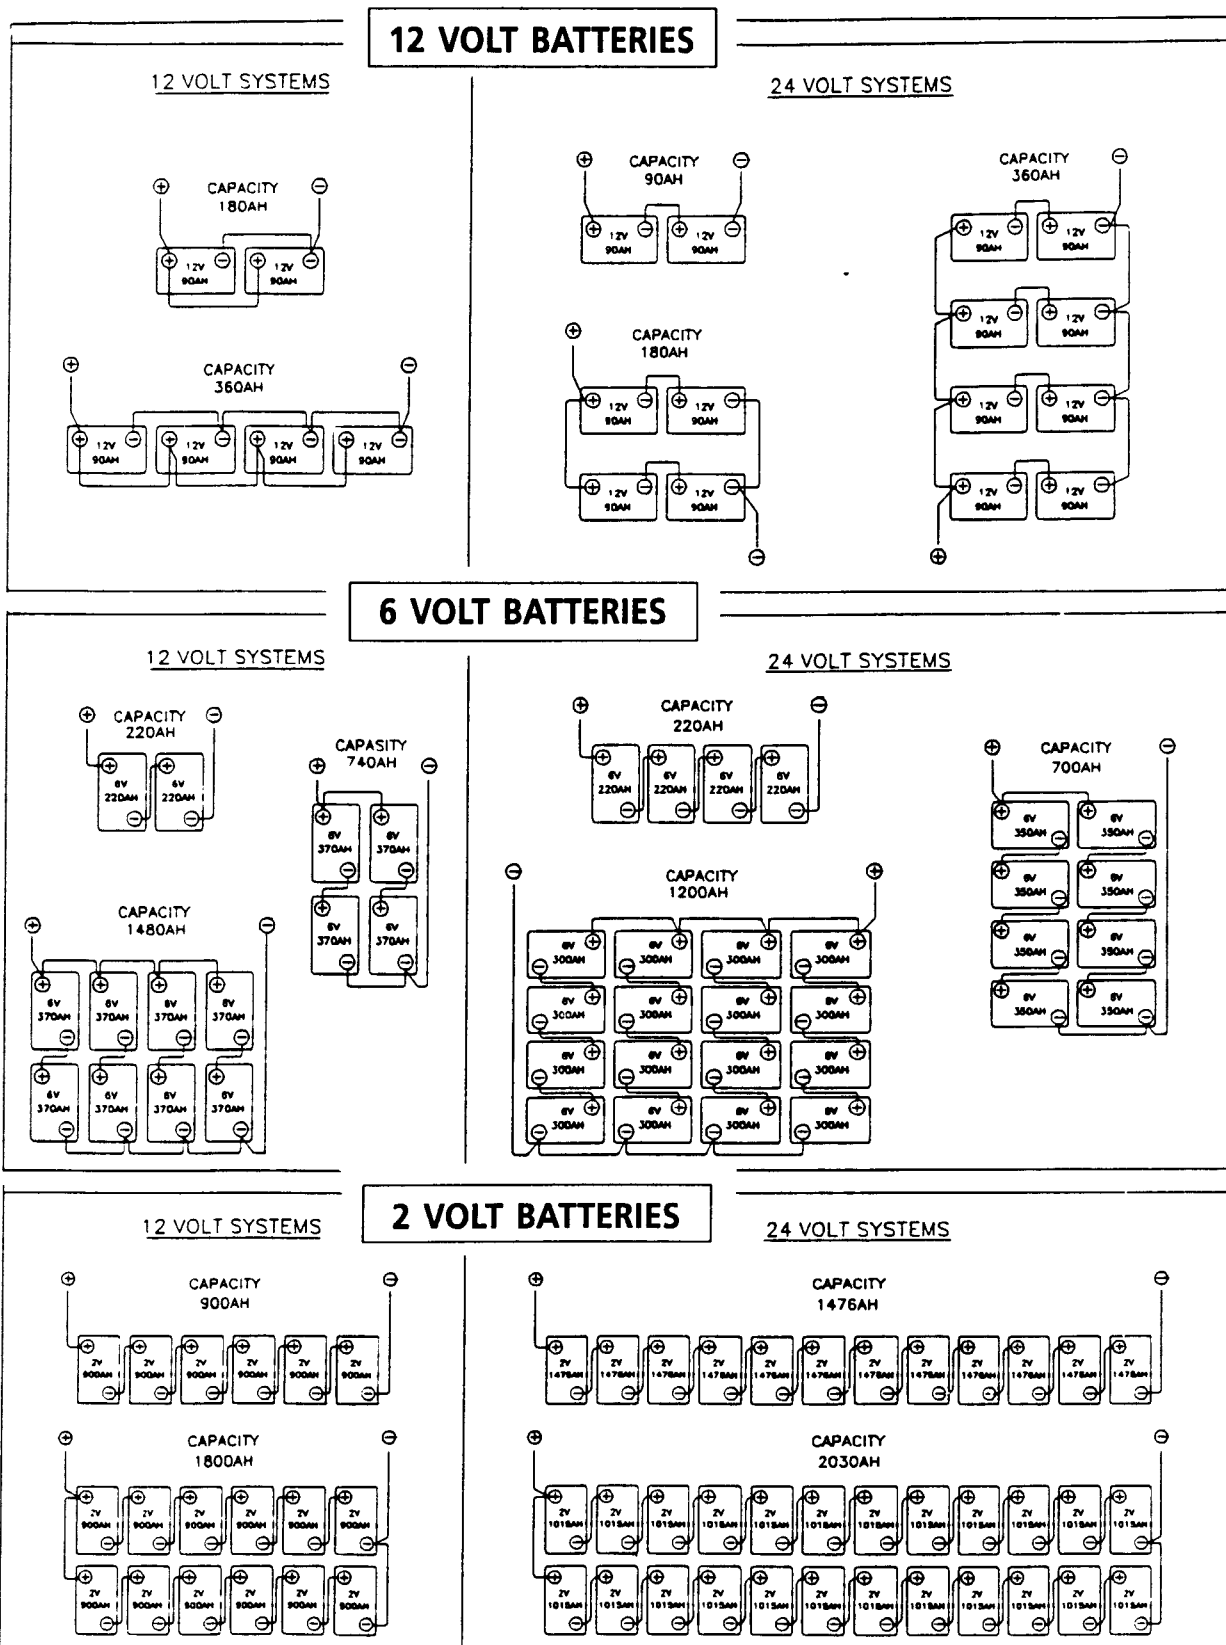

Solar Array Sizing Worksheet

Use these worksheets to determine your solar and battery requirements. We have included an example column and a column for your system.

Give us a call if we can be of help.

	WINTER	YEARLY AVERAGE	WINTER	YEARLY AVERAGE
	Example:			
1. Locate your site on the Winter and Average yearly insolation map on page 6 and list the nearest figures.	2.5	5.0	_____	_____
2. Take the daily corrected total loads in watt hours from your load calculations sheet.	1000	1000	_____	_____
3. Divide line 2 by line 1. This is the number of watts we need to generate per hour of full sun.	400	200	_____	_____
4. Find actual power produced by your selected module and enter here (rated amperage x battery voltage during charging). Example: Using KC-60's, one module produces 3.55 amps. 13 volts is a common charging voltage for 12 volt systems. Actual power = amperage x charging voltage.	(3.55 x 13)		_____	_____
	46.2	46.2	_____	_____
5. Divide line 3 by line 4. The result is the number of modules required for your system. When rounding this number, remember that sets of 2 modules are needed for a 24 volt system, sets of 4 for 48, etc.,	8.67	4.33	_____	_____

You can see from the example that almost twice the number of modules are required in the winter because in this instance we have half as much available sunlight. In northerly climates this is often aggravated by a larger wintertime demand for more lights, etc. For this reason we often size residential solar power systems (in the interest of cost-effectiveness) to provide 100% of summer or yearly average loads and meet the winter shortfall with a generator. Remote communications are generally sized to winter conditions.

Example:

Battery Sizing Worksheet

- Determine total watt hours per day required from your load calculation.
- Determine days of storage required. This approximates the greatest number of cloudy days in a row expected (3 to 7 is common for residences, 7 to 14 for remote communications and monitoring sites).
- Multiply line 1 by line 2.
- Determine planned depth of discharge. 80% is the maximum for lead acid deep cycle batteries, 50% a common amount for optimum longevity. Divide line 3 by .80 or .50, respectively.
- Derate your battery for low temperatures by multiplying line 4 by the factors in the table below using lowest expected weekly average temperature.

Battery Temp. F°	Multiplier	Battery Temp. F°	Multiplier
80	1.00	40	1.30
70	1.04	30	1.40
60	1.11 (example)	20	1.59
50	1.19		

- Find the watt hour capacity of your selected battery. This is voltage times ampere hour capacity. Example; L-16 deep cycle, 6 volts x 350 amp hours.
- Divide line 5 by line 6. The result is the number of batteries required.
- Round number of batteries to fit system voltage. Example; A 24 volt system requires sets of 2 when using 12 volt batteries, sets of 4 when using 6 volt batteries and sets of 12 when using 2 volt cells.

1000

7

7000

(.50)
14,000

15,540

MSX-20L

2100

7.4

8

Note: The battery bank amperage should normally be **at least** 5 times the hourly amperage draw of the largest appliance or 5 times the highest hourly amperage output of the battery charger.

Load Evaluation Form							Please copy if more than one sheet required.	
NAME:								
Appliance	Wattage (Volts x Amps)			Hrs. Per Day	Days Per Week	÷	Avg. Watt-Hrs./Day	
	AC	DC	Mult. by 1.15 for AC					
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
			X	X	X	/7 =		
HIGHEST AC LOAD IN WATTS:		TOTAL AC CONNECTED WATTAGE AT ONE TIME:			TOTAL WATT-HOURS PER DAY:			
TOTAL WATT-HR PER DAY:	÷	LOAD CORRECTION FACTOR*:		=	CORRECTED WATT-HR PER DAY:			
	÷	.70		=				

*The load correction factor is required as batteries are not 100% efficient and other losses occur in a system. We increase the load value by 30% to compensate for these losses.

Home Power System Questionnaire for Solar and/or Wind

To help us in designing the optimum system for your site, please answer the following.

Do you have power at present? _____

Estimated daily wattage required? _____

Year-round use? _____

Seasonal? _____, What seasons and average length of stay? _____

Mount structure preference? _____ Fixed _____ Tracking

Roof mount _____ Ground Mount _____ Pole Mount _____

Do you have consistent winds over 25 mph? _____

If roof, what pitch? _____

New home or retrofit? _____

If new construction, what is your construction schedule? _____

Will you need power from the system for construction? _____

Where will the batteries and control center be placed? _____

What are the dimensions of this space? _____

What are the measured distances between:

Array to control center? _____

Control center to AC distribution panel? _____

If DC loads are present-distance to each separate
load from DC distribution panel;

DC load 1? _____

DC load 2? _____

DC load 3? _____

Distance to the water pump? _____

What type of water storage? _____ Pressure tank _____ cistern

At what depth is the pump set (ft. below surface?) _____

Pump voltage? _____ What H.P.? _____ Pump control box present? _____

Is your site in a lightning prone area? _____

The insolation figures we utilize are for large cities. Please list the nearest large city. _____

Would you say you have more or less sun than this city during:

Spring? _____ Summer? _____ Fall? _____ Winter? _____

Snow loads:

If snowfall is substantial, to what maximum depth? _____

Is drifting snow common at your site? To what depth? _____

Are you installing the system yourself or hiring the work done? _____

Are you the primary user or is this a commercial dwelling? _____

Any other special considerations? _____

**A picture says a thousand words,
please make a top view sketch of
your home site on the next page.
Here is a listing of what we need:**

Detail the south aspect
Solar array site
Home location & size
Power shed (if required)
Generator location (if required)
Shade potential - i.e. terrain, trees, etc.
Water source

Wind generators

Preferred wind generator model
and wattage
Height of surrounding trees, structures,
and terrain
Generator location
A side view drawing can be of help
Direction of prevailing winds
Distance from generator site to
control/battery room
Average wind speed (if known)

Inverter Overcurrent Protection, Cable and Powercenter Sizing Chart

Brand Name	Model	Continuous Wattage	Voltage	Maximum Input Amperage	Overcurrent Protection In Amps	Minimum Cable Size***	Powercenter Minimum Size****
Stat Power	150-12	150	12	16	20	#4	--
Stat Power	250-12	250	12	27	40	#2	--
Stat Power	250-24	250	24	13	20	#4	--
Stat Power	800-12	800	12	86	110	#2	3-202
Stat Power	800-24	800	24	43	60	#2	--
Stat Power	1500-12	1500	12	160	200	2/0	3-202
Stat Power	1500-24	1500	24	80	100	#2	3-202
Stat Power	2500-12	2300	12	246	300	4/0*	3-404
Stat Power	Prosine 1.2-12	1200	12	128	175	2/0	3-202
Stat Power	Prosine 2.5-12	2500	12	267	400	4/0*	3-404
Stat Power	Prosine 2.5-24	2500	24	134	175	2/0	3-202
Exceltech	250-12	250	12	27	40	#2	--
Exceltech	250-24	250	24	13	20	#4	--
Exceltech	500-12	500	12	54	100	#2	3-202
Exceltech	500-24	500	24	27	40	#2	--
Exceltech	1000-12	1000	12	107	150	2/0	3-202
Exceltech	1000-24	1000	24	53	100	#2	3-202
Exceltech	2000-12	2000	12	214	250	4/0*	3-404
Exceltech	2000-24	2000	24	107	150	2/0	3-202
Trace	812	575	12	62	100	#2	3-202
Trace	DR1512	1500	12	160	200	2/0	3-202
Trace	DR1524	1500	24	80	100	2/0	3-202
Trace	DR2424	2400	24	128	175	2/0	3-202
Trace	DR3624	3600	24	193	250	4/0	3-404
Trace	2512	2500	12	267	400	4/0*	3-404
Trace	2548	2500	48	67	100	2/0	3-202
Trace	SW2512	2500	12	267	400	4/0*	3-404
Trace	SW4024	4000	24	214	250**	4/0	3-404
Trace	SW4048	4000	48	107	150	2/0	3-202
Trace	SW5548	5500	48	147	200	2/0	3-202

Maximum Input Current defined as continuous power divided by 11,22, or 44 volts respectively at an inverter efficiency of 85%.

*This size cable is for free air installation only. If these cables are installed in conduit, NEC sizing requires **doubling** these conductors - two positive and two negative cables. Please call when sizing these inverters.

**The 4024 sinewave is within the ampacity of 4/0 cable if installed with 250 amp overcurrent protection.

If installed with 300 amp overcurrent protection - double 4/0 cables are required.

***75° cable - Derate by .8 for parallel conductors - Please refer to NEC table 310-16. Cable sizes are good for up to 10' of length, one way distance. Rounded to available product sizes.

****Powercenter DC load amperage is not included in this sizing - make provisions if present.

GLOSSARY

Definitions and explanations of terms and words used when working with solar electric systems.

AC - Alternating current. Electrical energy which reverses its direction at regular intervals.

AC Daily Power Budget - The daily amount of watts your AC appliances use.

AC Inverter and Battery Power Allowance - Running an inverter draws a small amount of power from your battery. So does keeping power stored. The inverter and battery allowance in your power calculations help make certain enough power will be produced to keep your battery from running in the red.

Adjusted Total Daily Power Budget - A total daily power budget may be changed to meet certain situations. For instance, if you spend only weekends at a house, then your adjusted total daily power budget will be lower. Adding a generator to your system also reduces your total daily power budget. The adjusted daily power budget provides the figure that determines the size of your solar electric power system.

Ampere or amp - Electric current is measured in amperes or amps.

Amp Hours - The number of amps used or produced in a given hour equals the number of hours. Batteries are rated in amp hours.

Array - A group of solar electric modules connected together in a power system.

Battery Bank - A group of batteries wired together to store power in a solar electric system. Allows you to use the stored power at night, on cloudy days, or to run more power than the array can produce at one time.

Centrifugal (Water Pumps) - Rotating outward, away from the center, as in centrifugal force.

Controller - Simply put, the controller regulates the current from solar charger to your battery bank.

Current - The rate of flow of an electric charge. Current is measured in amps.

DC - Direct current. Electrical energy flowing in one direction and of substantially constant value.

DC Daily Power Budget - The number of watts your DC appliances use daily.

Fall (Water Pump/Hydro Sections) - The vertical descent of water, usually measured in vertical feet. Also called "head".

Flow Rate - Speed at which water moves.

GPM - Gallons per minute.

Ground Mount - A piece of equipment upon which solar modules are mounted.

Head - See "Fall".

Hertz or Hz - the frequency of electrical current described in *cycles per second*. Appliances in the U.S. use 60 Hz. Appliances in other countries generally use 50 Hz.

Hydroelectricity - Electricity created by water power

Hydrometer - An instrument used to measure state-of-charge (voltage) of a battery.

Inverter - An appliance used to convert independent DC power into standard household AC current.

Kilowatt or kW - a thousand watts. (See Watts.)

LED - Light emitting diode. These lights are often used to indicate low power on modern electronic equipment.

Line Loss - Voltage drop over the length of electric line wire. Line loss robs your system of power when wire is too small for the load being run through the line — or when voltage is too low for the distance the power must travel.

Load - The lights or appliances run by your electrical system.

mA - Milliamps. 1000 mA = 1 amp.

Module - Modular solar electric charger; used interchangeably with solar electric panel.

Parallel Wiring - A system of wiring, for solar electric modules or batteries, which increases amperage. Parallel wiring is "+ to +" (positive to positive) and "- to -" (negative to negative).

Photovoltaic - Converting light into electricity. *Photo* means "light," *voltaic* means "electric". Often referred to as "PV" for short. More commonly referred to as "solar electric."

PSI - Pounds per square inch

Self-Regulating - Some modules have a special circuitry which keeps the battery from overcharging. This means that no controller is needed when the self-regulating module is properly matched to battery storage capacity.

Series Wiring - A system of wiring, for solar electric modules or batteries, which increases voltage. Series wiring is "+ to -" (positive to negative).

Single-Crystal Silicon - Many solar chargers use single-crystal solar cells as they are the most efficient cell on the market. Pure silicon is grown into crystalline ingots which are cut into thin slices to make solar electric cells. These cells are then soldered together to meet the charger's voltage and current requirements.

Solar Cell - The smallest basic solar electric device which generates electricity when exposed to light.

Solar Electric - The preferred term used to describe something which uses sunlight to produce electricity. Photovoltaic is the more technical term.

Thin-Film Silicon - The tiny solar chargers found in calculators and wrist watches are solar thin-film. Thin-film solar chargers are made by spreading a micro-thin layer of silicon on glass and creating the voltage and current circuits using laser technology. Thin-film chargers are produced in sizes from the microscopic calculator chip, up to the 1 x 4 power module.

Total Daily Power Budget - In a DC system, the daily amount of watts your DC appliances use, plus the battery power allowance. In a DC and AC system, the daily amount of watts DC and AC appliances use, plus battery and inverter power allowances.

Voltage or Volts - Voltage is the rating of the *amount of electrical pressure* that causes electricity to flow in the power line. If electricity were water, voltage would measure the amount of pressure at the faucet.

Watts - A watt is a measurement of total electrical power. Volts x amps = watts.

Watt Hour - The quantity of electrical energy used or produced when one watt is used for one hour